

Trusted. Tested. Tough.™



**50 Hz**

Visit our web site:  
zoellerpumps.com








Product information presented here reflects conditions at time of publication. Consult factory regarding discrepancies or inconsistencies.

# INSTALLATION INSTRUCTIONS

## Duplex Sewage Package System

### PREINSTALLATION CHECKLIST - ALL INSTALLATIONS

- Inspect your pump.** Occasionally, products are damaged during shipment. If the unit is damaged, contact your dealer before using. **Do Not** remove the test plug in the cover.
- Carefully read the literature** provided to familiarize yourself with specific details regarding installation and use. These materials should be retained for future reference.

|  <p><b>WARNING</b></p> <p>SEE BELOW FOR LIST OF WARNINGS</p>  | <p><b>SAFETY INSTRUCTIONS</b></p>  |
|--|--|
| <ol style="list-style-type: none"> <li><b>To reduce the risk of electrical shock</b>, a properly grounded receptacle of grounding type must be installed and protected by a ground fault circuit interrupter (GFCI) and in accordance with National Electrical Code and local codes. (SEE WARNING BELOW)</li> <li>Make certain that the receptacle is within the reach of the pump's power supply cord. <b>DO NOT USE AN EXTENSION CORD.</b> Extension cords that are too long or too light do not deliver sufficient voltage to the pump motor, and they could present a safety hazard if the insulation were to become damaged or the connection end were to fall into a damp or wet area.</li> <li><b>Testing for Ground.</b> As a safety measure, each electrical outlet should be checked for ground using an Underwriters Laboratory Listed circuit analyzer which will indicate if the power, neutral and ground wires are correctly connected to your outlet. If they are not, call a qualified electrician.</li> <li><b>For Added Safety.</b> Pump must be connected to a 3-prong grounded outlet interrupter device (ground fault circuit interrupter).</li> <li><b>FOR YOUR PROTECTION, ALWAYS DISCONNECT PUMP FROM ITS POWER SOURCE BEFORE HANDLING.</b> Single phase pumps are supplied with a 3-prong grounded plug to help protect you against the possibility of electrical shock. <b>DO NOT, UNDER ANY CIRCUMSTANCES, REMOVE THE GROUND PIN.</b> To reduce the risk of electrical shock, a properly grounded receptacle of grounding type must be installed and protected by a ground fault circuit interrupter (GFCI) in accordance with national electrical code and local codes.</li> <li>Installation and checking of electrical circuits and hardware should only be performed by a qualified licensed electrician.</li> <li><b>Risk of electric shock</b> - These pumps have not been investigated for use in swimming pool areas.</li> </ol> | <p><b>TO AVOID SERIOUS OR FATAL PERSONAL INJURY OR MAJOR PROPERTY DAMAGE, READ AND FOLLOW ALL SAFETY INSTRUCTIONS IN THIS MANUAL AND ON THE PUMP.</b></p> <p><b>THIS MANUAL IS INTENDED TO ASSIST IN THE INSTALLATION AND OPERATION OF THIS UNIT AND MUST BE KEPT WITH THE PUMP.</b></p> <p> This is a <b>SAFETY ALERT SYMBOL.</b> When you see this symbol on the pump or in the manual look for one of the following signal words and be alert to the potential for personal injury or property damage.</p> <p> <b>WARNING</b> Warns of hazards that <b>CAN</b> cause serious personal injury, death or major property damage.</p> <p> <b>CAUTION</b> Warns of hazards that <b>CAN</b> cause personal injury or property damage.</p> <p> Warns of electrical shock hazards that <b>CAN</b> cause serious personal injury, death or major property damage.</p> <p> Identifies any terminal which is intended for connection to an external conductor for protection against electrical shock in case of a fault, or the terminal of a protective earth (ground) electrode.</p> <p> Read operator's manual.</p> <p><b>THOROUGHLY REVIEW ALL INSTRUCTIONS AND WARNINGS PRIOR TO PERFORMING ANY WORK ON THIS PUMP. MAINTAIN ALL SAFETY DECALS.</b></p> |
| <p><b>REFER TO WARRANTY ON PAGE 2.</b></p>   |  |

**DO NOT USE FOR PUMPING OILS, GASOLINE OR ANY PETROLEUM BY-PRODUCTS.**

# CAUTION

SEE BELOW FOR LIST OF CAUTIONS

1. Check to be sure your power source is capable of handling the voltage requirements of the motor, as indicated on the pump or basin plate.
2. Make sure the pump electrical supply circuit is equipped with fuses or circuit breakers of proper capacity. A separate branch circuit is recommended, sized according to the National Electrical Code for the current shown on the pump name plate.
3. Repair and service should be performed by a Zoeller Pump Company Authorized Service Station only.
4. All plumbing (discharge and vent lines) must be installed to meet local codes. Unit must be vented. **DO NOT USE AN AUTOMATIC PLUMBING VENT DEVICE SIMILAR TO A "PRO-VENT"**. Some states require this product to be installed by a licensed plumber.
5. CHECK VALVE MUST BE USED TO REDUCE UNNECESSARY CYCLING OF PUMP.
6. This system must be installed above the water table. Groundwater outside the basin will cause it to collapse.

## LIMITED WARRANTY

This product is warranted for 1 year from the date of purchase or 1.5 year from the date of manufacture, whichever occurs first. Subject to the conditions hereinafter set forth, the manufacturer will repair or replace to the original consumer, any portion of the product which proves defective due to defective materials or workmanship. To obtain warranty service, contact the dealer from whom the product was purchased. The manufacturer retains the sole right and option to determine whether to repair or replace defective equipment, parts or components. Damage due to conditions beyond the control of the manufacturer is not covered by this warranty.

THIS WARRANTY WILL NOT APPLY: (a) To defects or malfunctions resulting from failure to properly install, operate or maintain the unit in accordance with printed instructions provided; (b) to failures resulting from abuse, accident or negligence; (c) to normal maintenance services and the parts used in connection with such service; (d) to units which are not installed in accordance with normal applicable local codes, ordinances and good trade practices; and (e) if the unit is used for purposes other than for what it was designed and manufactured.

RETURN OF WARRANTED COMPONENTS: Any item to be repaired or replaced




 
 
 
 
 




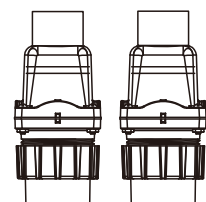



**In those instances where damages are incurred as a result of an alleged pump failure, the Homeowner must retain possession of the pump for investigation purposes.**

under this warranty must be returned to the manufacturer at Louisville, KY Indiana or such other place as the manufacturer may designate, freight prepaid.

THE WARRANTY PROVIDED HEREIN IS IN LIEU OF ALL OTHER EXPRESS WARRANTIES, AND MAY NOT BE EXTENDED OR MODIFIED BY ANYONE. ANY IMPLIED WARRANTIES SHALL BE LIMITED TO THE PERIOD OF THE LIMITED WARRANTY AND THEREAFTER ALL SUCH IMPLIED WARRANTIES ARE DISCLAIMED AND EXCLUDED. THE MANUFACTURER SHALL NOT, UNDER ANY CIRCUMSTANCES, BE LIABLE FOR INCIDENTAL, CONSEQUENTIAL OR SPECIAL DAMAGES, SUCH AS, BUT NOT LIMITED TO DAMAGE TO, OR LOSS OF, OTHER PROPERTY OR EQUIPMENT, LOSS OF PROFITS, INCONVENIENCE, OR OTHER INCIDENTAL OR CONSEQUENTIAL DAMAGES OF ANY TYPE OR NATURE. THE LIABILITY OF THE MANUFACTURER SHALL NOT EXCEED THE PRICE OF THE PRODUCT UPON WHICH SUCH LIABILITY IS BASED.

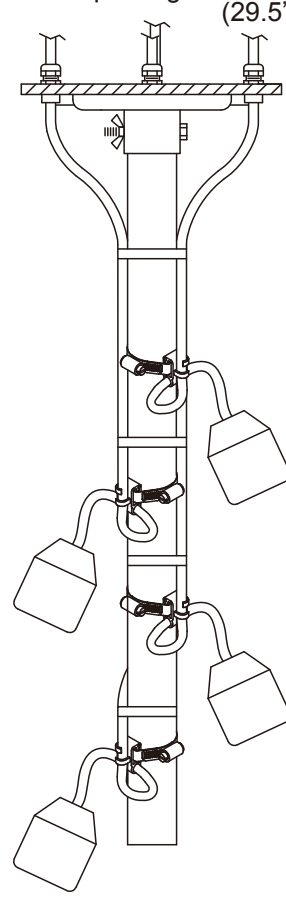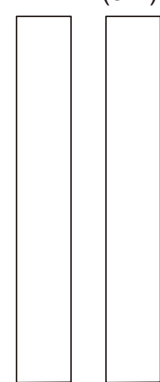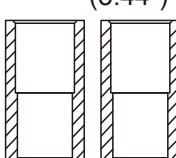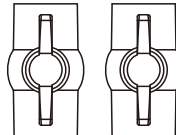This warranty gives you specific legal rights, and you may have other rights which vary from country to country. Some countries do not allow limitations on duration of implied warranties or exclusion of incidental or consequential damages, so the above limitations may not apply to you.

## ACCESSORIES DESCRIPTION

|   |   |  |   |  |
|---|---|--|---|--|
| <p>Float tree<br/>1-1/2" Pipe length 749 mm (29.5")</p>  | <p>2" Pipe x2<br/>Length 864 mm (34")</p>  <p>Coupling x2<br/>2" turn Ø63 mm O.D.<br/>Length 87.5 mm (3.44")</p>  <p>Strip x6</p>  | <p>1-1/4" Pipe x2<br/>or<br/>2" Pipe x2<br/>Length 90 mm (3.54")</p>  <p>1-1/4" Pipe x2<br/>or<br/>2" Fitting x2 (NPT)</p>  <p>Cover screw set x6</p>  <p>Float tree screw set x4</p>  | <p>2" Ball valve x2</p>  <p>2" Fitting x1 (PT)</p>  <p>1-1/4" to 2" Reducer x2 (Grinder only)</p>  <p>Cord seal x2</p>  | <p>2" Union Check valve x2</p>  <p>Ø110 mm O.D.(4") Inlet hub</p>  <p>Foam seal x1</p>  <p>Pipe seal x2</p>  |
|---|---|--|---|--|

EA0050


# RECOMMENDED INSTALLATION FOR ALL APPLICATIONS

- ① Electrical wiring and protection must be in accordance with governing electrical code and any other applicable local electrical requirements.
- ② Install proper Zoeller unichek (combination union and check valve), preferably just above the basin to allow easy removal of the pump for cleaning or repair.
- ③ All installations require a basin cover to prevent debris from falling into the basin and to prevent accidental injury.
- ④ When a Unichek is installed, drill a 5 mm (3/16") dia. hole in the discharge pipe even with the top of the pump. To avoid the water stream impact on the float operation, the hole location should avoid facing the float. To reduce the noise from the water stream hitting the basin, drill the hole below "off" point is recommended. **NOTE: THE HOLE MUST ALSO BE BELOW THE BASIN COVER AND CLEANED PERIODICALLY.** (High Head unit see #3 under "Caution" on front page). Water stream will be visible from this hole during pump run periods.
- ⑤ Securely tape or clamp power cord to discharge pipe, clear of the float mechanism(s).

- ⑥ Use full-size discharge pipe.
- ⑦ Basin must be in accordance with applicable codes and specifications.
- ⑧ Pump must be level and float mechanism(s) clear of sides of basin before starting pump.
- ⑨ Basin must be clean and free of debris after installation.
- ⑩ Gate Valve or Ball Valve to be supplied by installer and installed according to any and all codes.
- ⑪ Locate float switches as shown in sketches. The best place for the "off" point is above the motor housing and positioned 180° from the inlet. Never put "off" point below discharge on pump (sewage & effluent only). **NOTE: FOR AUTOMATIC PUMPS, USE DEWATERING INSTALLATION SKETCH.**
- ⑫ Gas tight seals required to contain gases and odors.
- ⑬ Vent gases and odors to the atmosphere through vent pipe.


## STEP 1

Apply glue to every piping connection.

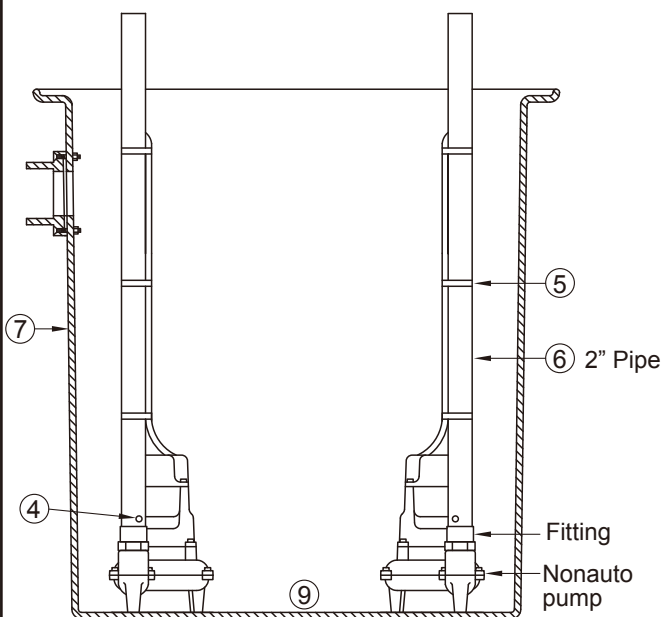

EA0050

## STEP 2

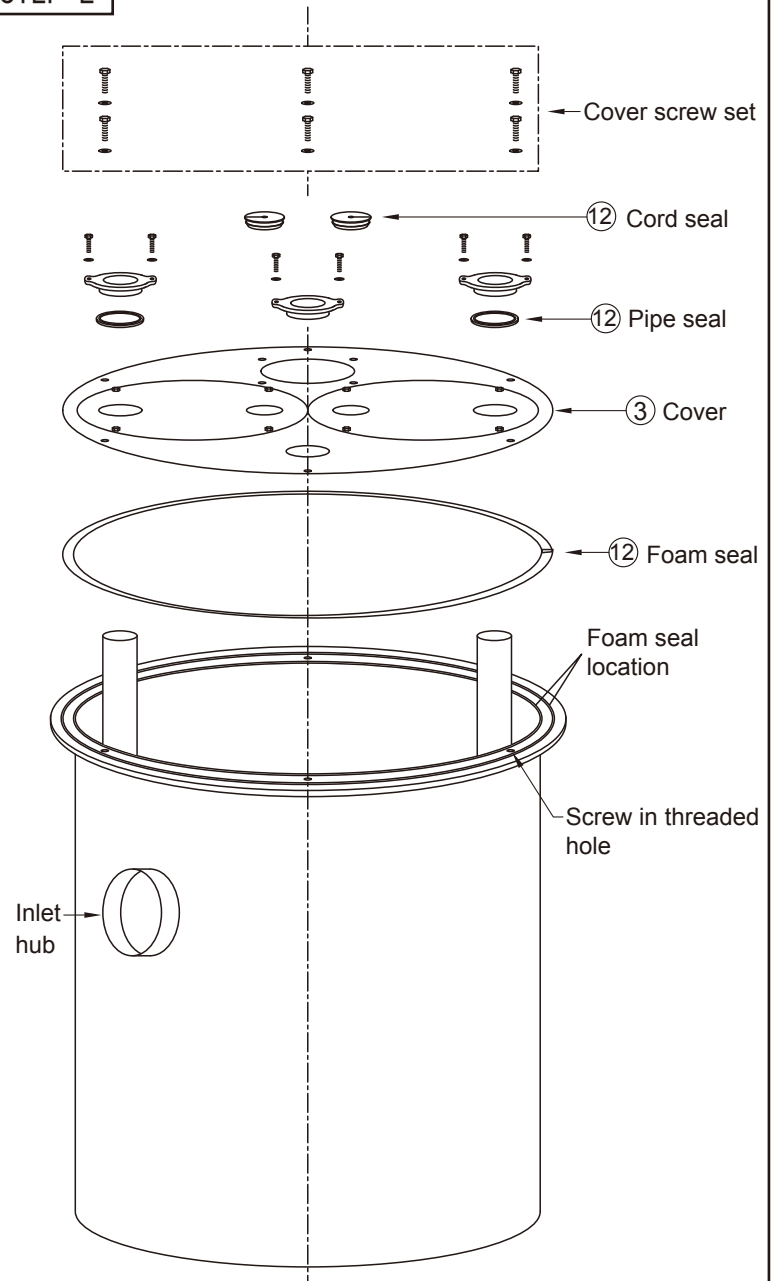


EA0051

# RECOMMENDED INSTALLATION FOR ALL APPLICATIONS

- ① Electrical wiring and protection must be in accordance with governing electrical code and any other applicable local electrical requirements.
- ② Install proper Zoeller unichek (combination union and check valve), preferably just above the basin to allow easy removal of the pump for cleaning or repair. On sewage, effluent or dewatering, if high head or below cover installation is required use.
- ③ All installations require a basin cover to prevent debris from falling into the basin and to prevent accidental injury.
- ④ When a Unichek is installed, drill a 5 mm (3/16") dia. hole in the discharge pipe even with the top of the pump. To avoid the water stream impact on the float operation, the hole location should avoid facing the float. To reduce the noise from the water stream hitting the basin, drill the hole below "off" point is recommended. **NOTE: THE HOLE MUST ALSO BE BELOW THE BASIN COVER AND CLEANED PERIODICALLY.** (High Head unit see #3 under "Caution" on front page). Water stream will be visible from this hole during pump run periods.
- ⑤ Securely tape or clamp power cord to discharge pipe, clear of the float mechanism(s).
- ⑥ Use full-size discharge pipe.
- ⑦ Basin must be in accordance with applicable codes and specifications.
- ⑧ Pump must be level and float mechanism(s) clear of sides of basin before starting pump.
- ⑨ Basin must be clean and free of debris after installation.
- ⑩ Gate Valve or Ball Valve to be supplied by installer and installed according to any and all codes.
- ⑪ Locate float switches as shown in sketches. The best place for the "off" point is above the motor housing and positioned 180° from the inlet. Never put "off" point below discharge on pump (Sewage & Effluent only). **NOTE: FOR AUTOMATIC PUMPS, USE DEWATERING INSTALLATION SKETCH.**
- ⑫ Gas tight seals required to contain gases and odors.
- ⑬ Vent gases and odors to the atmosphere through vent pipe.


## STEP 3

Pump must be level and float mechanism(s) clear of sides of basin before starting pump.

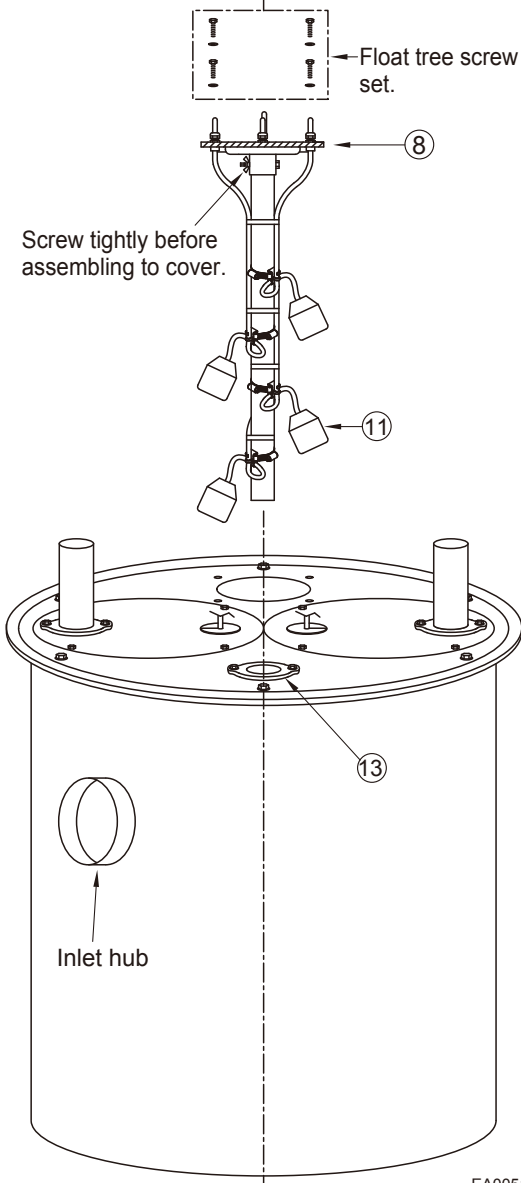

## STEP 4

Apply glue on every piping connection.

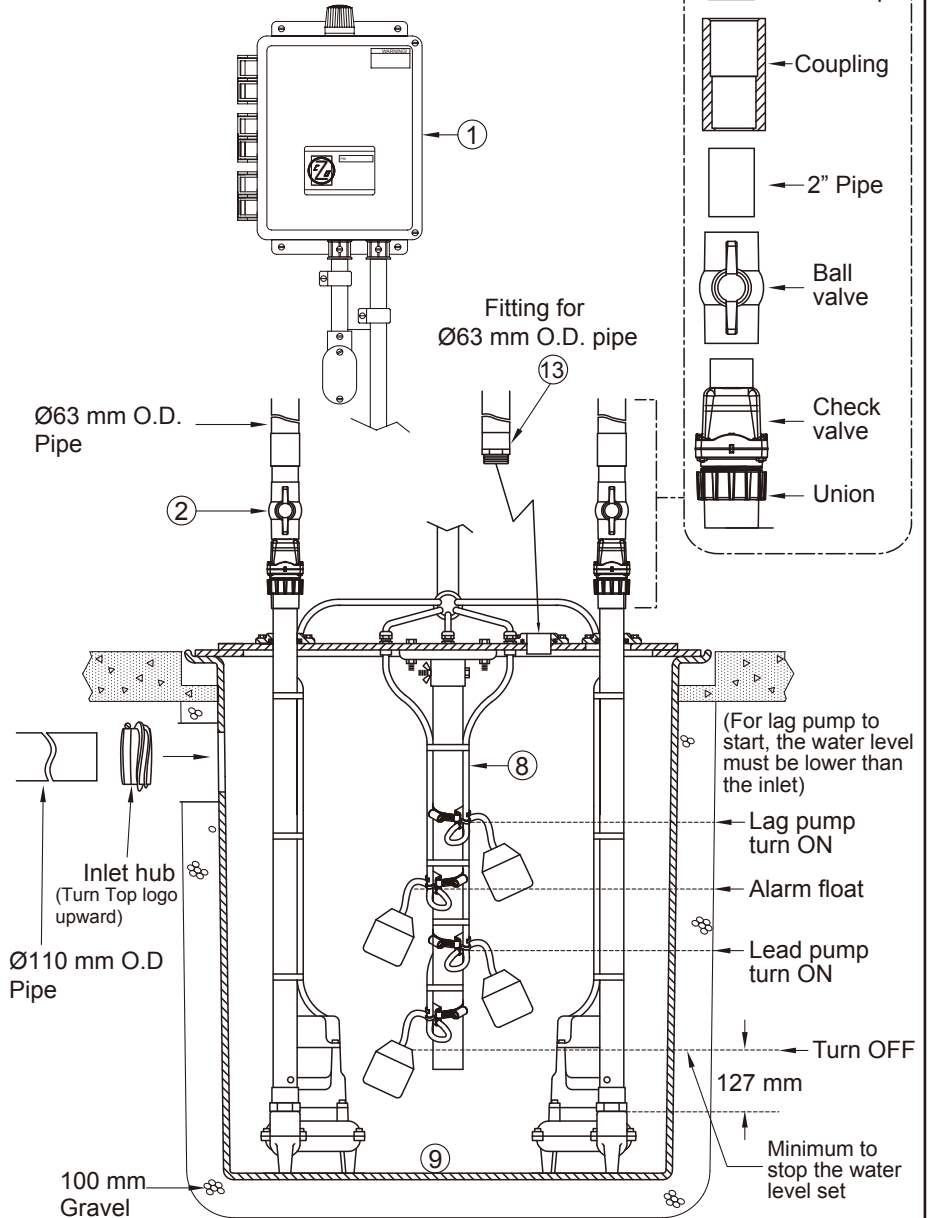



# INSTALLATION INSTRUCTIONS

## HOW TO INSTALL

### JACKEL'S 4" DWV SNAP-IN HUB\*


**Note:** The Snap-in hub is made from plastic rubber and is designed for use with 4" DWV ABS Schedule 40 pipe and 4" PVC Schedule 40 pipe (114 mm (1-1/2") OD) and has an operating range from -28 °C (-20 °F) to 50 °C (120 °F).

- (A) Step 1** Hold Snap-in hub in upward position in right hand so that the ARROW and TOP markings are visible.
- Step 2** With right hand push bottom track, which is molded in the Snap-in hub, into the bottom edge of tank hole.
- Step 3** Hole in place with left hand inside tank. Then squeeze hub outside of tank into oval shape and push into hole, pulling with left hand and fitting rest of hole edge into the track.
- Step 4** If hub appears out of round, run fingers around inside hub seal to make sure it has a tight fit. Examine outer lip edge and press into track if caught on outer edge.
- (B) To insert your 4" ABS or PVC pipe:**
- Step 1** Cut pipe square.
- Step 2** Chamfer end. Failure to do so can cut built-in 'O' rings off. The 'O' rings in the Snap-in hub make the seal and are vital.
- Step 3** USE ANY LIQUID SOAP and rub around the circumference of the pipe approximately 102 mm (4") back from the chamfered end and insert chamfered end of pipe into the Snap-in hub using sufficient pressure to push pipe through the Snap-in hub. Extend pipe into tank approximately 25 mm (1") beyond the inside edge of the snap-in hub.
- Caution:* DO NOT USE A TWISTING FORCE – rather, use a sideways motion.
- Step 4** Install non-corrosive clamp by placing the worm gear housing of clamp in slot provided on the top of the Snap-in hub. Wrap strap around inside the groove and tighten sufficiently.
- Note: Snap-in hub is not mechanically sealed.



## DIMENSIONAL DATA

**Basin 760x910 mm, 910x760 mm, 910x910 mm**

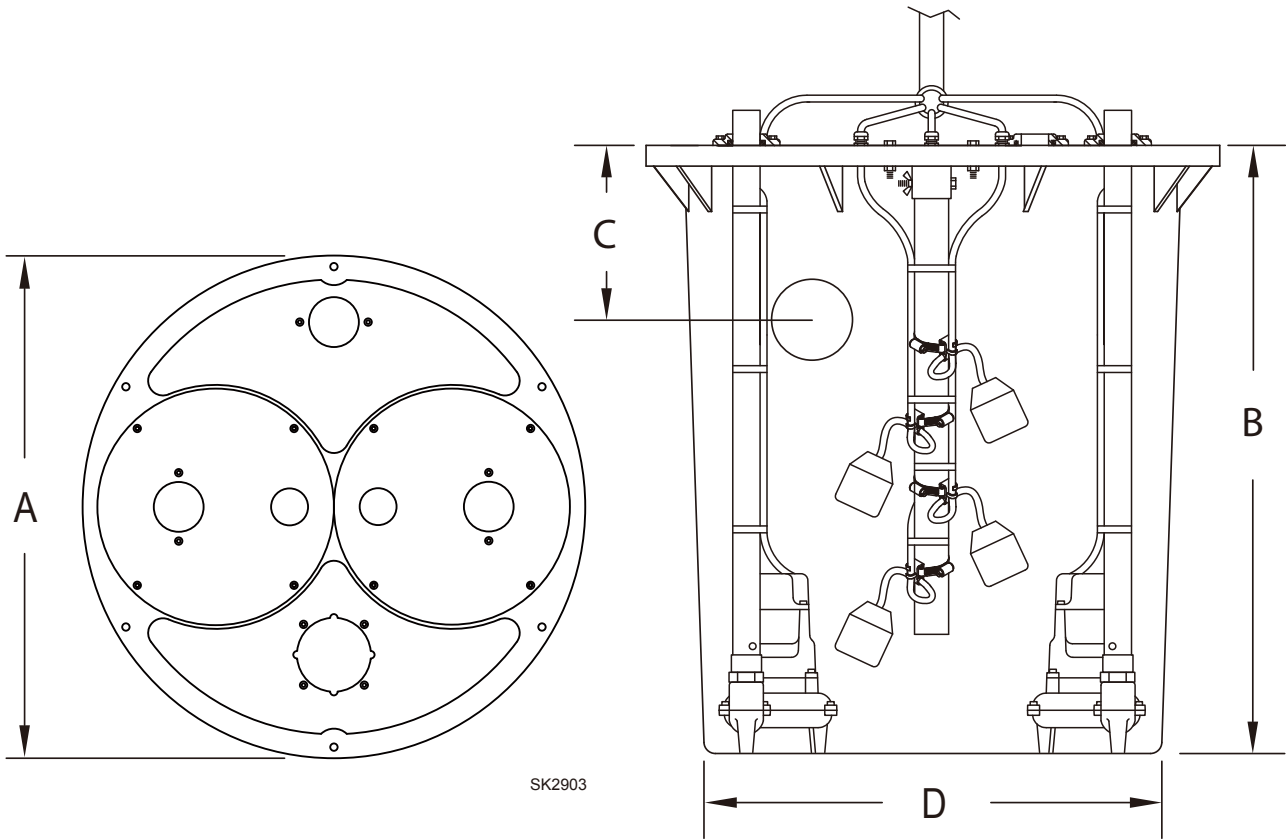


| Size                        | Dimension        |                 |                     |                 |
|-----------------------------|------------------|-----------------|---------------------|-----------------|
|                             | A                | B               | C                   | D               |
| 760 x 910 mm<br>(30" x 36") | 914 mm<br>(36")  | 914 mm<br>(36") | 267 mm<br>(10-1/2") | 762 mm<br>(30") |
| 910 x 760 mm<br>(36" x 30") | 1016 mm<br>(40") | 762 mm<br>(30") | *                   | 914 mm<br>(36") |
| 910 x 910 mm<br>(36" x 36") | 1067 mm<br>(42") | 914 mm<br>(36") | 267 mm<br>(10-1/2") | 914 mm<br>(36") |

\* Carry out the hole in accordance with customer needs.

# INSTALLATION STEPS



Cover orientation

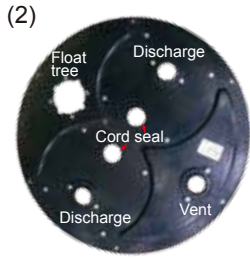

Cover location map



Screw in thread hole.



Adjust cover to match thread hole.



Assemble foam seal.




Pump orientation, tie the cord with strip.




Cord come through cord seal.




Loosen screw.

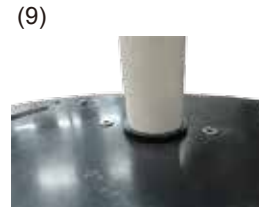


Place seal.

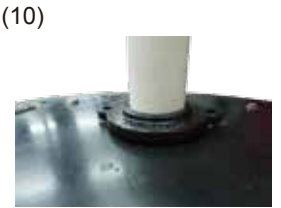

Place discharge flange.

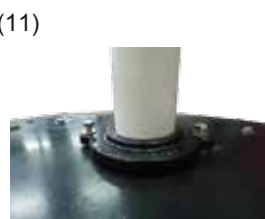


Screw tightly.

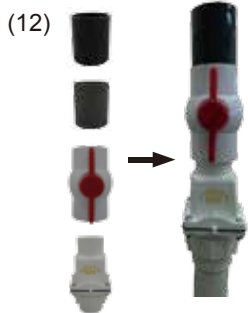


Assemble union check valve and ball valve.



Screw vent fitting.

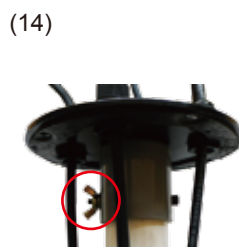

Screw tightly before assembling the to cover

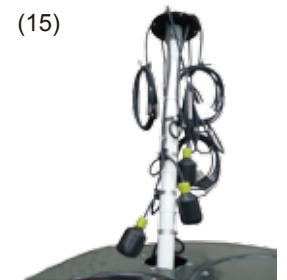


Assemble float tree. Ensure float faces central of basin.



Screw down the float tree plate.



Align the cover and screw in tightly.

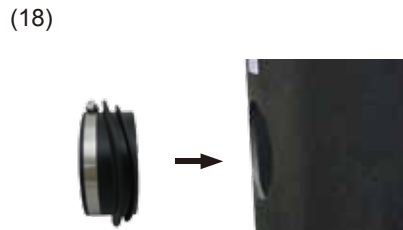

Assemble (Turn Top logo upward)

**Apply glue to every piping connection.**

# Notice to Installer: Instructions must remain with installation.

Trusted. Tested. Tough.™

Product information presented here reflects conditions at time of publication. Consult factory regarding discrepancies or inconsistencies.



**50Hz**

Visit our web site:  
zoellerpumps.com

**NOTICE: VENT HOLE FOR CHECK VALVE SEE #4 IN CAUTION SECTION BELOW AND #4 ON PAGE 9**

## INSTALLATION INSTRUCTIONS

### RECOMMENDED MODELS

| GRINDER | SEWAGE               | EFFLUENT/SUMP/DEWATERING     |
|---------|----------------------|------------------------------|
| 807     | 222, 422             | 49, 53, 55, 57, 59, 72, 76   |
| 841     | 264, 266, 267, 268   | 86, 88, 98                   |
| 2702    | 270, 4270, 271, 4271 | 137, 139                     |
| 2722    | 282                  | 140, 4140, 145, 4145         |
|         | 292, 293, 294        | 152, 153, 161, 162, 163, 165 |
|         | 4290, 4291           | 185, 189                     |
|         | 490 series           | 371, 372, 373                |
|         | 2223/2233            |                              |

|                 |
|-----------------|
| DATE INSTALLED: |
| MODEL NUMBER:   |

Where codes permit, sewage pumps can be used for effluent systems. Non-automatic pump(s) with external level controls are recommended for septic tank applications.



## PREINSTALLATION CHECKLIST - ALL INSTALLATIONS

1. **Inspect your pump.** Occasionally, products are damaged during shipment. If the unit is damaged, contact your dealer before using. **DO NOT** remove the test plugs in the cover nor the motor housing.
2. **Carefully read the literature** provided to familiarize yourself with specific details regarding installation and use. These materials should be retained for future reference.



### WARNING

SEE BELOW FOR LIST OF WARNINGS

1. To reduce the risk of electrical shock, a properly grounded receptacle or control box must be installed in accordance with the governing codes. Never remove ground pin from plug.
2. Make certain that the receptacle or control box is within reach of the pump's power supply cord. **DO NOT USE AN EXTENSION CORD.** Extension cords that are too long or too light do not deliver sufficient voltage to the pump motor, and they could present a safety hazard if the insulation were to become damaged or the connection end were to fall into a damp or wet area.
3. Make sure the pump's electrical supply circuit is equipped with fuses or circuit breakers of proper capacity. A separate branch circuit is recommended, sized according to the governing electrical codes for the current shown on the pump name plate.
4. **Testing for ground.** As a safety measure, each electrical outlet should be checked for ground using a circuit analyzer which will indicate if the power, neutral and ground wires are correctly connected to your outlet. If they are not, call a qualified licensed electrician.
5. **FOR YOUR PROTECTION, ALWAYS DISCONNECT PUMP FROM ITS POWER SOURCE BEFORE HANDLING.** If pump is wired direct, de-energize the circuit at the control box. **DO NOT, UNDER ANY CIRCUMSTANCES, REMOVE THE GROUND PIN.** Wear insulated protective shoes and do not stand in water. Pumps equipped with a grounded plug are designed to help protect against electrical shock. A properly grounded receptacle or control box must be installed in accordance with governing codes.
6. Installation and servicing of the pump's electrical circuits and hardware should only be performed by a qualified licensed electrician.
7. Installation and maintenance of this appliance is not intended for persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience or knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
8. **Risk of electrical shock.** Do not remove power supply cord and strain relief or connect conduit directly to the pump. If the supply cable is damaged, it must be replaced by an authorized Zoeller Representative.
9. Pump may contain oil which becomes pressurized and hot when operating. Allow 2-1/2 hours after disconnecting before attempting service.
10. Pump is not intended for potable water due to possible contamination by oil contained in the pump.
11. **Risk of electric shock.** These pumps have not been investigated for use in swimming pools and marine areas.

## SAFETY INSTRUCTIONS

**TO AVOID SERIOUS OR FATAL PERSONAL INJURY OR MAJOR PROPERTY DAMAGE, READ AND FOLLOW ALL SAFETY INSTRUCTIONS IN THIS MANUAL AND ON THE PUMP.**

**THIS MANUAL IS INTENDED TO ASSIST IN THE INSTALLATION AND OPERATION OF THIS UNIT AND MUST BE KEPT WITH THE PUMP.**



This is a **SAFETY ALERT SYMBOL.**

When you see this symbol on the pump or in the manual look for one of the following signal words and be alert to the potential for personal injury or property damage.



**WARNING** Warns of hazards that **CAN** cause serious personal injury, death or major property damage.



**CAUTION** Warns of hazards that **CAN** cause personal injury or property damage.



Warns of electrical shock hazards that **CAN** cause serious personal injury, death or major property damage.



Identifies any terminal which is intended for connection to and external conductor for protection against electrical shock in case of a fault, or the terminal of a protective earth (ground) electrode.



Read operator's manual.

**THOROUGHLY REVIEW ALL INSTRUCTIONS AND WARNINGS PRIOR TO PERFORMING ANY WORK ON THIS PUMP. MAINTAIN ALL SAFETY DECALS.**

**REFER TO WARRANTY ON PAGE 2.**





## SEE BELOW FOR LIST OF CAUTIONS

- This unit is not designed to handle any material larger than the pump's solids-passing ability.
  - Model 49 and the 70 and 80 series pumps are designed to pass 9 mm (3/8") spherical solids.
  - 50 and 90 series, models 140, 371, 372 pumps are designed to pass 12 mm (1/2") spherical solids.
  - 130 series pumps are designed to pass 15 mm (5/8") spherical solids.
  - Models 145 and 373 and the 150, 160 and 180 series pumps are redesigned to pass 19 mm (3/4") spherical solids.
  - 4290 and 490 series pumps are designed to pass 38 mm (1-1/2") spherical solids.
  - 200 series and 2234 sewage pumps are designed to pass 50 mm (2") spherical solids.
- Check to be sure your power source is capable of handling the voltage requirements of the motor, as indicated on the pump name plate.
- The installation of variable level float switches is the responsibility of the installing party, and care should be taken that the tethered float switch will not hang up on the pump apparatus or pit peculiarities and is secured so that the pump will shut off. It is recommended to use rigid piping and fittings and the pit be 45 cm (18") or larger in diameter.
- Vent hole. It is necessary that all submersible sump, effluent, and sewage pumps capable of handling various sizes of solid waste be of the bottom intake design to reduce clogging and seal failures. If a check valve is incorporated in the installation, a 5 mm (3/16") vent hole must be drilled in the discharge pipe below the check valve and pit cover to purge the unit of trapped air. Vent hole should be checked periodically for clogging. The vent hole on a High Head application may cause too much turbulence. You may not want to drill one. If you choose not to drill a vent hole, be sure the pump case and impeller is covered with liquid before connecting the pipe to the check valve. **NOTE: THE HOLE MUST BE BELOW THE BASIN COVER AND CLEANED PERIODICALLY.** Water stream will be visible when pump is operating.
- Pump should be checked frequently for debris and/or build up which may interfere with the float "on" or "off" position. Repair and service should be performed by an authorized Zoeller Company Representative only.
- Maximum operating temperature for standard model pumps must not exceed 54 °C (130 °F) for cast iron pumps, or 40 °C (104 °F) for pumps with plastic motor housings.
- Do not operate a pump in an application where the Total Dynamic Head is less than the minimum Total Dynamic Head listed on the Pump Performance Curves.
- For health reasons, do not unplug, turn off, or disable pump and use pump tank system as a way to fill up a sink or laundry tray, etc.

## LIMITED WARRANTY

Manufacturer warrants, to the purchaser and subsequent owner during the warranty period, every new product to be free from defects in material and workmanship under normal use and service, when properly used and maintained, for a period of one year from date of purchase by the end user, or 18 months from date of original manufacture of the product, whichever comes first. Parts that fail within the warranty period, one year from date of purchase by the end user, or 18 months from the date of original manufacture of the product, whichever comes first, that inspections determine to be defective in material or workmanship, will be repaired, replaced or remanufactured at Manufacturer's option, provided however, that by so doing we will not be obligated to replace an entire assembly, the entire mechanism or the complete unit. No allowance will be made for shipping charges, damages, labor or other charges that may occur due to product failure, repair or replacement.

This warranty does not apply to and there shall be no warranty for any material or product that has been disassembled without prior approval of Manufacturer, subjected to misuse, misapplication, neglect, alteration, accident or uncontrolled act of nature; that has not been installed, operated or maintained in accordance with Manufacturer's installation instructions; that has been exposed to outside substances including but not limited to the following: sand, gravel, cement, mud,

tar, hydrocarbons, hydrocarbon derivatives (oil, gasoline, solvents, etc.), or other abrasive or corrosive substances, wash towels or any other abusive entity, etc. in all pumping applications. The warranty set out in the paragraph above is in lieu of all other warranties expressed or implied; and we do not authorize any representative or other person to assume for us any other liability in connection with our products. Contact authorized distributors to obtain any needed repair or replacement of part(s) or additional information pertaining to our warranty.

MANUFACTURER EXPRESSLY DISCLAIMS LIABILITY FOR SPECIAL, CONSEQUENTIAL OR INCIDENTAL DAMAGES OR BREACH OF EXPRESSED OR IMPLIED WARRANTY; AND ANY IMPLIED WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE AND OF MERCHANTABILITY SHALL BE LIMITED TO THE DURATION OF THE EXPRESSED WARRANTY.

Some jurisdictions do not allow limitations on the duration of an implied warranty, so the above limitation may not apply to you. Some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

This warranty gives you specific legal rights and you may also have other rights which vary from jurisdiction to jurisdiction.

**In those instances where damages are incurred as a result of an alleged pump failure, the Homeowner must retain possession of the pump for investigation purposes.**

## EASY DO'S & DON'T'S FOR INSTALLING UNIT

- DO** read all installation material with the unit.
- DO** inspect unit for any visible damage caused by shipping. Contact dealer if unit appears to be damaged.
- DO** remove all debris from the basin. Be sure that the pump will have a hard, level surface beneath it. **DO NOT** install on sand, gravel or dirt.
- DO** be sure that the area is large enough to allow proper clearance for the level control switch(es) to operate properly.
- DO Always Disconnect Pump From Power Source Before Handling.** **DO** always connect to a separately protected and properly grounded circuit. **DO NOT** ever cut, splice, or damage power cord (only splice in a watertight junction box). **DO NOT** carry or lift pump by its power cord. **DO NOT** use an extension cord.
- DO** install a check valve and a union in the discharge line. **DO NOT** use a discharge pipe smaller than the pump discharge.
- DO NOT** utilize this unit for pumping gasoline or other hazardous liquids.
- DO** test pump immediately after installation to be sure the system is working properly.
- DO** review all applicable governing codes and verify that the installation conforms to each of them.
- DO** consult manufacturer for clarifications or questions.
- DO** consider a Two Pump System with an alarm where an installation may become overloaded or primary pump failure would result in property damages.
- DO** inspect and test system for proper operations at least every 3 months.

## SERVICE CHECKLIST


| CONDITION  | COMMON CAUSES   |
|--|---|
| A. Pump will not start or run.                         | Check fuse, low voltage, overload open, open or incorrect wiring, open switch, impeller or seal bound mechanically, motor or wiring shorted. Float assembly held down. Switch, damaged or out of adjustment.  |
| B. Motor overheats and trips overload or blows fuse.   | Incorrect voltage, negative head (discharge open lower than normal) impeller or seal bound mechanically, motor shorted.   |
| C. Pump starts and stops too often.                    | Float switch tether length too short, check valve stuck open, or none installed in long distance line, overload open, bidding, sump pit too small.  |
| D. Pump will not shut off.                             | Debris under float assembly, float bound by basin sides or other, switch, damaged or out of adjustment.   |
| E. Pump operates but delivers little or no water.      | Check inlet, strainer housing, discharge pipe, and vent holes for obstructions. Discharge head exceeds pump capacity. Low or incorrect voltage. Incoming water containing air or causing air to enter pumping chamber. Incorrect motor rotation. (3 phase pumps only) |
| F. Drop in head and/or capacity after a period of use. | Increased pipe friction, clogged line or check valve. Abrasive material and adverse chemicals could possibly deteriorate impeller and pump housing. Check line. Remove base and inspect.  |
| G. If tank or fittings leak.                           | Carefully tighten pipe joints (use pipe dope) and screws. Check gasket location, tighten lid evenly. Do not over tighten fittings or screws.  |

If the above checklist does not reveal the problem, consult the factory. Do not attempt to service or otherwise disassemble pump. Service must be performed by an authorized Zoeller Company representative.

### RECOMMENDED INSTALLATION FOR ALL APPLICATIONS


- (1) Electrical wiring and protection must be in accordance with governing electrical codes.
- (2) Install proper Zoeller unichuck (combination union and check valve), preferably just above the basin to allow easy removal of the pump for cleaning or repair. If high head or below cover installation is required, use 30-0164 on Ø50 mm O.D. (1-1/2") pipe, 30-0152 on Ø63 mm O.D. (2") pipe and 30-0160 on Ø90 mm O.D. (3") pipe.
- (3) All installations require a basin cover to prevent debris from falling into the basin and to prevent injury.
- (4) When a Unichuck is installed, drill a 5 mm (3/16") diameter hole in the discharge pipe even with the top of the pump. **NOTE: THE HOLE MUST ALSO BE BELOW THE BASIN COVER AND CLEANED PERIODICALLY.** (High Head unit see #4 under "Caution" on front page). Water stream will be visible from this hole when pump is operating.
- (5) Securely tape or clamp power cord to discharge pipe, clear of the float mechanism(s).
- (6) Use full-size discharge pipe.
- (7) Basin must be in accordance with governing codes and specifications.
- (8) Pump must be level and float mechanism(s) clear of sides of basin before starting pump.
- (9) Basin must be clean and free of debris after installation.
- (10) Gate valve, shut-off valve or ball valve to be supplied by installer and installed according to any and all codes.
- (11) Locate float switches as shown in sketches. The best place for the "off" point is above the motor housing and positioned 180° from the inlet. Never put "off" point below discharge on pump
- (12) Gas tight seals required to contain gases and odors.
- (13) Vent gases and odors to the atmosphere through vent pipe.
- (14) Optional pump stand (P/N 10-2421) eliminates the need for blocks or bricks under the pump. For use with effluent and dewatering pumps only.
- (15) Optional watertight control box available, see FM1597 for details.
- (16) For proper spacing of "On" - "Off" switches refer to local or national standards and guidelines.
- (17) Optional septic tank risers for easy access to pump, controls and filters.

**NOTE:** Double-seal pumps offer extra protection from damage caused by seal failure.

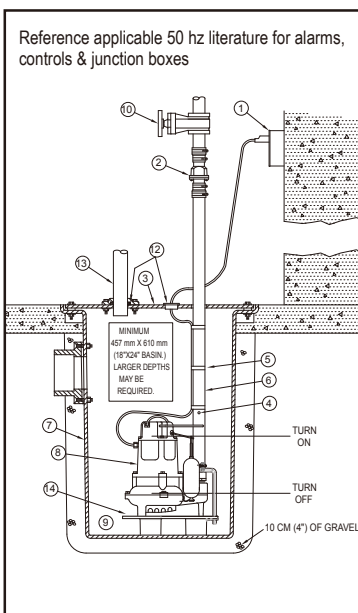


SK292

TYPICAL DEWATERING INSTALLATION

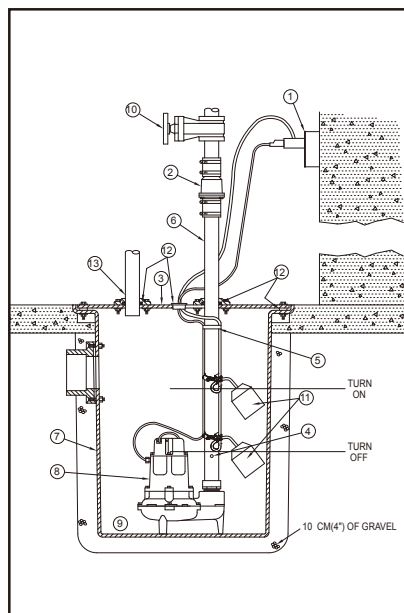

SK290

TYPICAL SEWAGE INSTALLATION

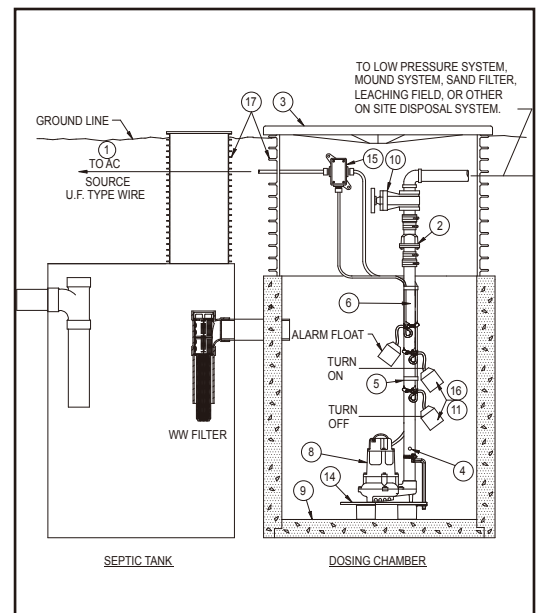


SK291

TYPICAL EFFLUENT INSTALLATION


All installations must comply with all applicable electrical and plumbing codes.

## SUGGESTED METHODS OF FLOAT INSTALLATION

On some installations it may be desirable to install an independent hanger for the level control switches to avoid possible hang ups on the pumps, piping, valves, etc. Float hangers are available from Zoeller Company on Catalog Sheet FM0526 or can be fabricated from standard pipe and fittings.

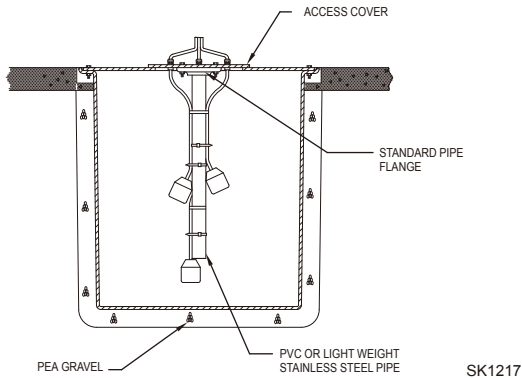

TYPICAL FLOAT HANGER ON STEEL COVER PITS

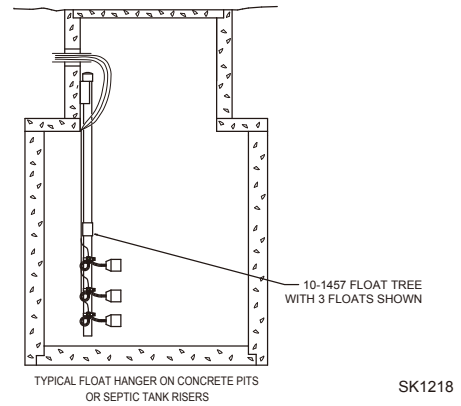

TYPICAL FLOAT HANGER ON CONCRETE PITS OR SEPTIC TANK RISERS

## PUMP WIRING INSTRUCTIONS



**WARNING** FOR YOUR PROTECTION, ALWAYS DISCONNECT PUMP FROM ITS POWER SOURCE BEFORE HANDLING.

For single phase pumps supplied with a grounded plug, **DO NOT, UNDER ANY CIRCUMSTANCES, REMOVE THE GROUND PIN.** The plug **must** be inserted into a mating grounded receptacle. If the installation does not have such a receptacle, it must be changed to the proper type, wired and grounded in accordance with all applicable local codes and ordinances.

All three phase pumps require motor starting devices with motor overload protection. Three phase pumps **must** be installed in accordance with all applicable local codes and ordinances. Pumps are not to be installed in locations classified as hazardous.



**WARNING** Risk of electrical shock. Do not remove power supply cord and strain relief or connect conduit directly to the pump.

**WARNING** Installation and checking of electrical circuits and hardware should be performed by a qualified licensed electrician.

### Single Phase Installation


To operate a non-automatic pump automatically, a control panel or 20 amp control switch (P/N 10-0748) must be added to the power circuit. Follow the instructions provided with the panel or float switch to wire the system.

### Three Phase Installation

Three phase pumps are nonautomatic. To operate automatically, a control panel is required. Follow the instructions provided with the panel to wire the system. For automatic three phase pumps see automatic 3 phase wiring diagram located to the far right.


Before installing a pump, check the pump rotation to insure that wiring has been connected properly to power source, and that the green lead of power cord, is connected to a valid ground, momentarily energize the pump, observing the directions of kick back due to starting torque. Rotation is correct if kick back is in the opposite direction of rotation arrow on the pump casing. If rotation is not correct, switching of any two power leads other than ground, should provide the proper rotation.

### NONAUTOMATIC 3 PHASE

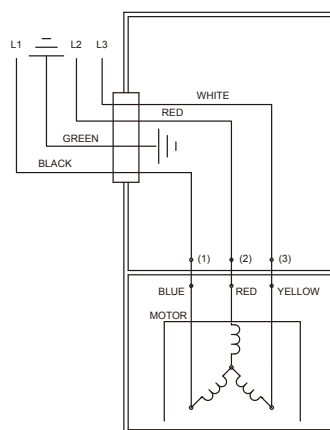

006848

### AUTOMATIC 3 PHASE

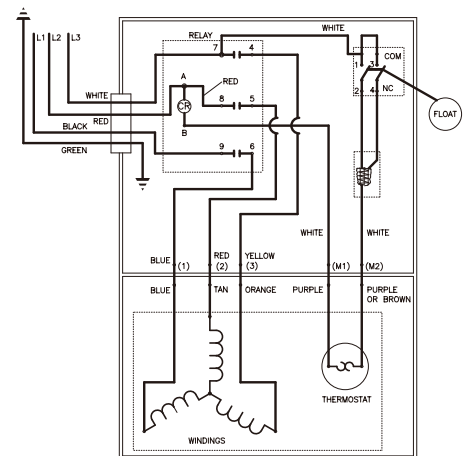

013071

## EXTRA PROTECTION SYSTEMS

### TWO-PUMP SYSTEM


The extra protection two-pump system is an economical solution to the costly duplex alternating pump system and it's easy to install.

The extra protection two-pump systems consists of:


- a. Two nonautomatic pumps with float switch of your choice
- b. One alarm system
- c. Two unichek valves as required

### ADVANTAGES

- 1) The two pump system offers high pump performance without the high price. It is economical and easy to install.
- 2) Delivers more dependability than a single pump system and greatly reduces the risk of costly and time-consuming problems.
- 3) Affords greater satisfaction and peace of mind to all concerned by providing state of the art protection for costly and expensive surroundings.
- 4) Ability to change lead and lag positions by changing pump plug connection.

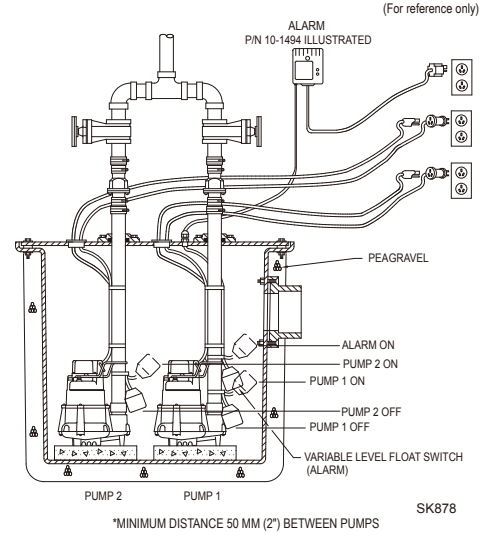


## V,WU MODEL INSTALLATION

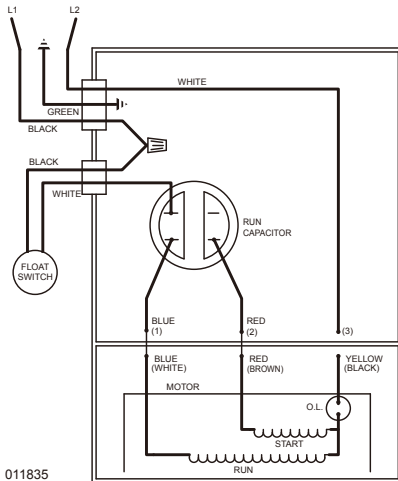

**WIRING DIAGRAM FOR MODELS  
WU, V - 220 V, 1 Ph, 50 Hz.**

| Determining Pumping Range<br>in millimeters (1 inch - 2.5 cm) |      |      |     |     |      |
|---|------|------|-----|-----|------|
|   | min. |      |     |     | max. |
| Tether Length   | 127  | 254  | 381 | 508 | 559  |
| (inch)  | 5    | 10   | 15  | 20  | 22   |
| Pumping Range   | 229  | 343  | 457 | 559 | 610  |
| (inch)  | 9    | 13.5 | 18  | 22  | 24   |

Use only as a guide. Due to weight of cable, pumping range above horizontal is not equal to pumping range below horizontal. Ranges are based on testing in nonturbulent conditions. Range may vary due to water temperature and cord shape. As tether length increases, so does the variance of the pumping range.

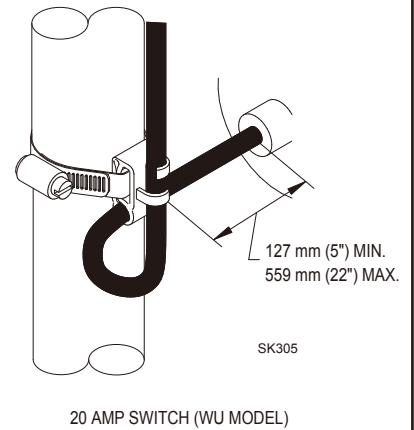


Model WU are fully automatic. Afloat switch is included and factory wired in the pump circuit to provide automatic operation once the float switch is secured properly to the outlet pipe. Use the diagram above to secure the float switch properly and obtain the proper tether to customize the on-off cycle to each application.

**Note:** Failure to keep within proper tether limits may prevent reliable switch operation.

**Note:** Cable must be mounted in horizontal position.

## 2223/2233 WIRING DIAGRAM

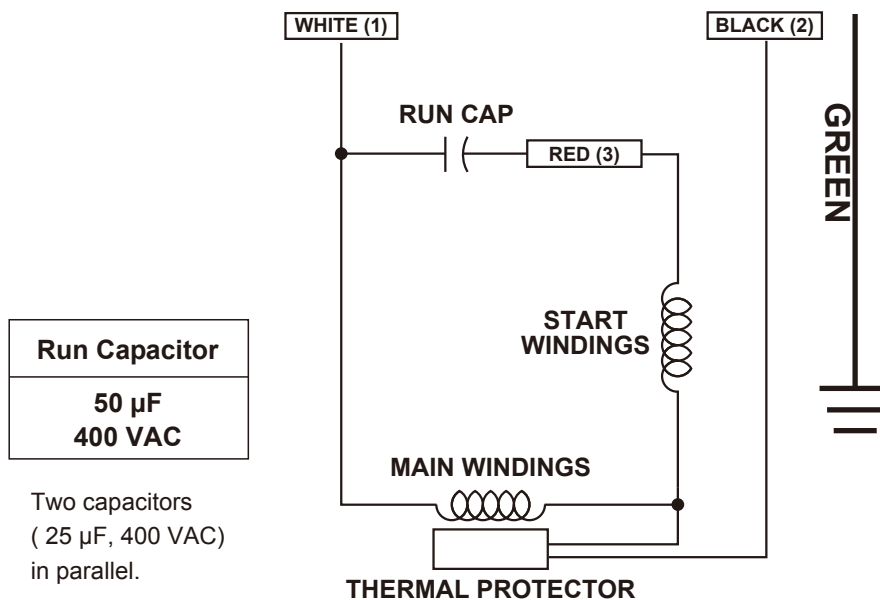

# 安装前务必详读说明书

Trusted. Tested. Tough.™

文件仅供参考  
若有任何修改  
恕不另行通知



50 Hz

Visit our web site:  
zoellerpumps.com








## 安装说明书

### 双泵套装系统污物提升器



#### 安装前检查

1. 安装前请仔细检查所有零件。产品如果在运送中受损，请尽速联络经销商。
2. 安装前仔细阅读所有提供的文件，熟悉安装细节，并保存资料以供未来参考。

|  <b>WARNING</b><br>警告  | 安全守则  |
|---|---|
| <ol style="list-style-type: none"><li>1. 为防范使用者触电，本公司所有产品皆配有包含接地功能的电线及三插插头。为确保安全，请勿将插头的接地插销拔除，并确认将插头插入符合国内电工法规的漏电保护插座。</li><li>2. 为确保安全请勿使用延长线。加装延长线容易使水泵马达接收不到足够的电压。更重要的是，若延长线的绝缘遭破坏、或插头松脱掉入水中，将可能造成危险。</li><li>3. 请确认在供给水泵电源的电路中加装适当规格的保险丝或断路器。在此建议依照水泵铭牌上的电流值，并参照国内电工法则来选择及安装独立的断路器。</li><li>4. 请在安装前测试插座的漏电保护功能。为了安全考量，请使用符合国内电工法规的电路测试仪器来检查插座中的火线、中性线及地线是否配置正确。若发现异常，请联络合格的水电技师来为您解决问题。</li><li>5. 仅得由持有证照的合格水电技师来进行水泵安装、管路搭配及电路配线。</li><li>6. 为了保护您的安全，接触水泵前请先拔除电源。</li><li>7. 为防范触电，本产品勿用于游泳池。</li></ol> | <p>为避免严重或致命的人身伤害及重大财产损失，请阅读并遵守水泵的所有安全操作说明。<br/>本说明书在协助安装和操作本机型时，必须符合水泵的安全操作守则。</p> <p> 这是一个安全警告符号。当你在水泵或说明书中看到此符号，请查询以下符号，并警惕人身伤害或发生财产损失的可能性。</p> <p> <b>WARNING</b><br/>警告，表示可能会导致严重的人身伤害、死亡或重大财产损失的危险。</p> <p> <b>CAUTION</b><br/>注意，表示可能会造成人身伤害或财产损失的危险。</p> <p> 电击危险警告，表示可能会导致严重的人身伤害、死亡或重大财产损失的危险。</p> <p> 接地标志，表示藉由连接外部导体之接地线，在故障时可防止触电发生。</p> <p> 阅读操作手册。</p> <p>使用水泵前，请彻底阅读本说明书内的说明和警告。并维护所有安全标签。</p> |
|   | 保固请参阅第14页。  |

请勿使用於油类、汽油、石油产品或含任何化学成分的液体。



# ⚠ CAUTION

# 注 意

1. 检查并确认使用的电源符合水泵铭牌上的规格需求。
2. 检查确认电源符合水泵或装置上铭牌所标示的电力资料。
3. 需依当地法令规章安装所有的配管(出水管及通气管)。本装置必须有通气。请勿使用自动管路通气设备。

4. 仅得由获授权的服务站进行维修服务。
5. 务必安装止回阀减少水回流，造成不必要的水泵持续运转。
6. 本套装系统需安装在平均地下水水位以上，避免损坏箱体。

## 保固说明

本产品的保固为自购买日起算的一年、或从工厂制造日期起算的1.5年，以先到期者为准。若能证明产品的缺陷是由材料或制造过程造成，本公司将负责维修或更换。本公司保留决定是否维修或更换产品、零件或配件的权利。维修或更换期间买方所产生的费用或损失不在保固范围内。本公司无法控制的损坏不在保固范围内。

保固不适用於：

- (1)未依照说明书安装、操作或维护所造成的故障或损坏。
- (2)不当操作、意外或疏忽所造成故障或损坏。
- (3)加装不属於本产品的零、配件。
- (4)未依照当地法规进行安装所造成的危害。


 

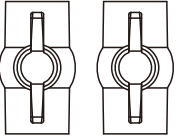
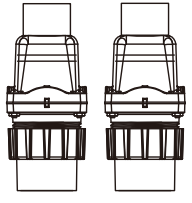
 

 
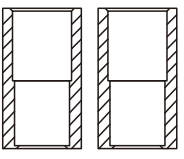
 






(5)将产品用在非原本设计的用途上所造成的损坏。(例：抽取沙、碎石、水泥、泥巴、沥青、碳氢化合物及其衍生物、汽油、化学溶剂或其他有腐蚀性的液体、毛巾、等。)  
 保固零、配件的退回：在本保固之下任何修理或更换需送回本公司或其他本公司所指定的维修服务点，运费需自付。在任何情况下本公司不承担其他责任，包含资产或设备的损坏、利润损失、等.....。

本公司的责任不超过产品的实售价格。

上述为本产品唯一的保固说明，任何人的修改或另做承诺皆为无效。

 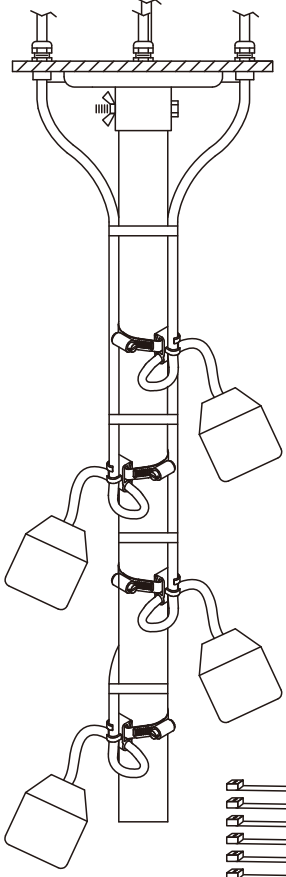在因涉嫌产品故障而招致损害的情况下，财产拥有人必须保留该产品以供调查之用。

## 配件说明

|   |  |  |  |   |
|---|--|--|--|---|
| <p><b>浮子杆</b><br/>1-1/2 英寸水管 长度749 mm</p>  | <p><b>水泵2 英寸水管x2</b><br/>长度864 mm</p>                 | <p>1-1/4 英寸水管x2<br/>或<br/>2 英寸水管x2<br/>长度90 mm</p>          | <p>2 英寸平口球阀x2</p>                                | <p>2 英寸止回阀+活接x2</p>                  |
|   |  | <p>1-1/4 英寸水管x2<br/>或<br/>2 英寸水管<br/>外丝滑接x2<br/>(NPT牙)</p>  | <p>(限磨碎泵)<br/>2 英寸通气孔<br/>外丝滑接x2<br/>(PT牙)</p>  | <p>1-1/4 英寸转<br/>2 英寸异径接头x2</p>      |
|   | <p><b>对接x2</b><br/>美规2 英寸转外径Ø63 mm<br/>长度87.5 mm</p>  |  | <p><b>上盖螺丝组x6</b></p>                            | <p><b>桶子边缘胶条x1</b></p>               |
|   | <p><b>水泵电缆线束带x6</b></p>                               |  | <p><b>浮子杆螺丝组x4</b></p>                           | <p><b>外径Ø110 mm入水口<br/>橡胶接头</b></p>  |
|   |  |  | <p><b>水泵电缆线密封圈x2</b></p>                         | <p><b>出水口橡胶环x2</b></p>               |


EA0050

# 安装说明


- ① 电气配线及保护措施需符合相关电气规范与当地其他应用惯例之需求。
- ② 请在水槽稍高处安装适当的活接与止回阀组合组件，以便於拆卸水泵供清洁整理或维修。於污水、污物或排水应用时若需高扬程或安装於盖板下。
- ③ 所有安装需使用水槽盖板防止杂物掉入水槽，并防止人员意外受伤。
- ④ 请在水泵水管钻一直径5 mm小孔，为避免通气孔水流影响对浮子的正常运作，通气孔的位置请避免面向浮子。建议钻孔位置低於”停止”水位，建议向下45度角可降低水流撞击桶子产生的噪音。注：该孔需低於水槽盖板，并需定期清理，水泵运转时可看见该小孔有水流出。
- ⑤ 用束带将电源线在出水管上固定牢靠，并使其避开浮子开关机构。
- ⑥ 出水管管径不可小於水泵出口口径。
- ⑦ 水槽需符合适用规范及规格。
- ⑧ 启动水泵前确认水泵水平，且浮子开关机构与水槽边墙保持净空距离，并确认浮子开关机构不被入水水流干扰。
- ⑨ 完成安装後必须清理水槽内所有杂物碎屑。
- ⑩ 闸阀或球阀由安装者提供，并需依照所有相关规范安装。
- ⑪ 如图示安装浮球开关。「停止」点的最佳位置为马达外壳上方、与入口成180°的方位。切勿将「停止」点配置在水泵出口以下。
- ⑫ 应使用气密密封圈隔绝气体与气味。
- ⑬ 利用通气管将气体与气味排出。

## 步骤 1

所有水管接合处都需上管路密封胶。

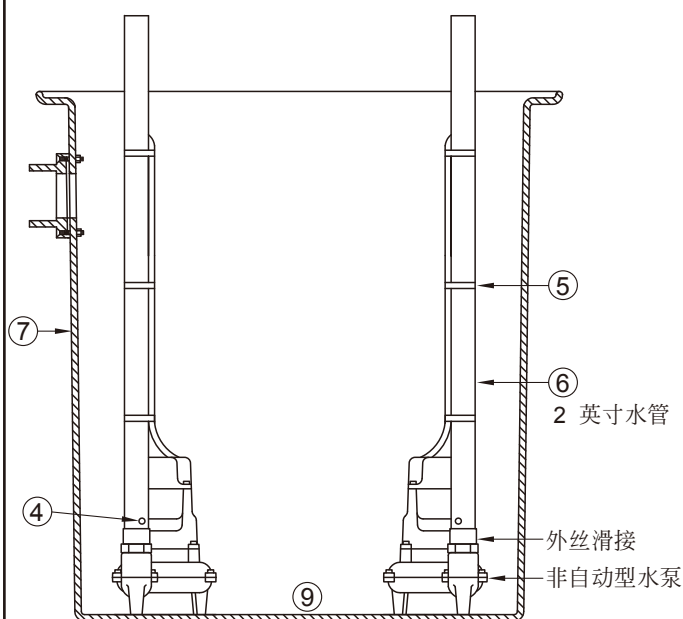

## 步骤 2

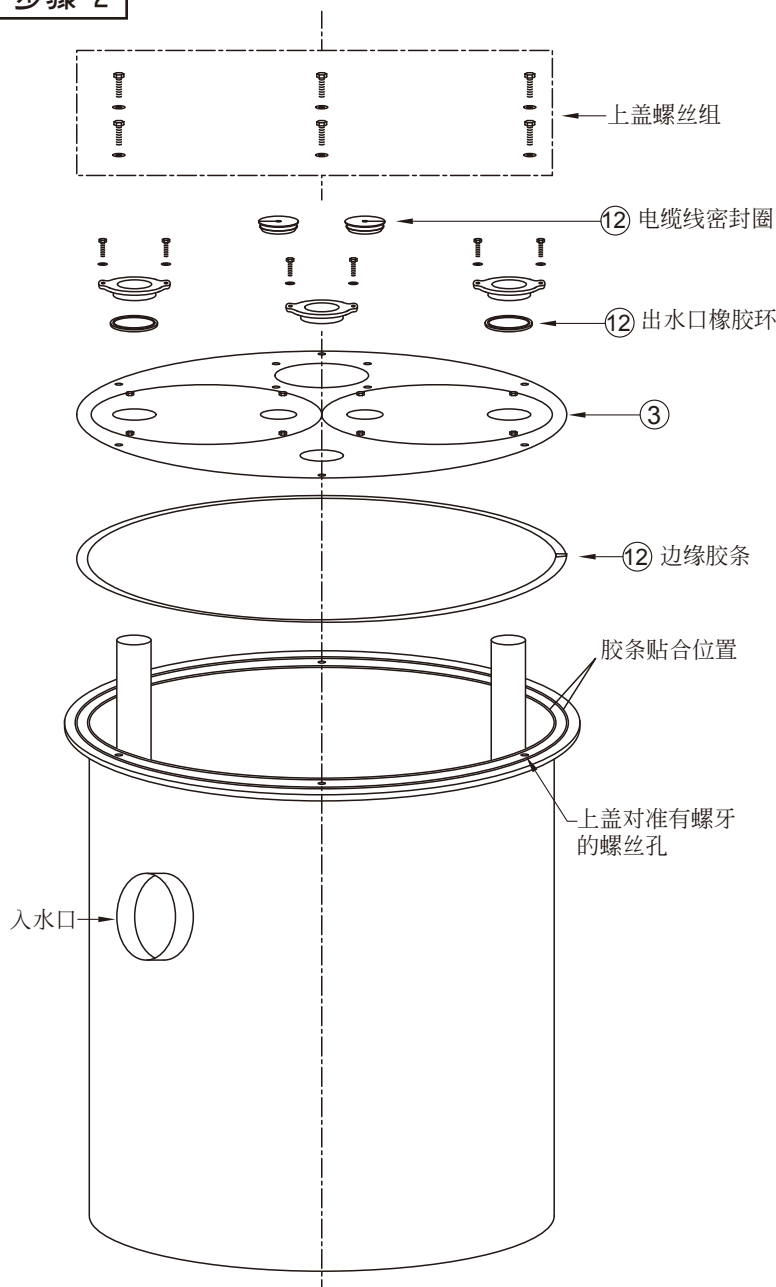

EA0051


EA0051

# 安装说明

- ① 电气配线及保护措施需符合相关电气规范与当地其他应用惯例之需求。
- ② 请在水槽稍高处安装适当的活接与止回阀组合组件，以便於拆卸水泵供清洁整理或维修。於污水、污物或排水应用时若需高扬程或安装於盖板下。
- ③ 所有安装需使用水槽盖板防止杂物掉入水槽，并防止人员意外受伤。
- ④ 请在水泵水管钻一直径5 mm小孔，为避免通气孔水流影响对浮子的正常运作，通气孔的位置请避免面向浮子。建议钻孔位置低於”停止”水位，建议向下45度角可降低水流撞击桶子产生的噪音。注：该孔需低於水槽盖板，并需定期清理，水泵运转时可看见该小孔有水流出。
- ⑤ 用束带将电源线在出水管上固定牢靠，并使其避开浮子开关机构。
- ⑥ 出水管管径不可小於水泵出口口径。
- ⑦ 水槽需符合适用规范及规格。
- ⑧ 启动水泵前确认水泵水平，且浮子开关机构与水槽边墙保持净空距离，并确认浮子开关机构不被入水水流干扰。
- ⑨ 完成安装後必须清理水槽内所有杂物碎屑。
- ⑩ 闸阀或球阀由安装者提供，并需依照所有相关规范安装。
- ⑪ 如图示安装浮球开关。「停止」点的最佳位置为马达外壳上方、与入口成180°的方位。切勿将「停止」点配置在水泵出口以下。
- ⑫ 应使用气密密封圈隔绝气体与气味。
- ⑬ 利用通气管将气体与气味排出。

## 步骤 3


请依图示位置安装，确保浮子开关机构不被入水水流干扰。

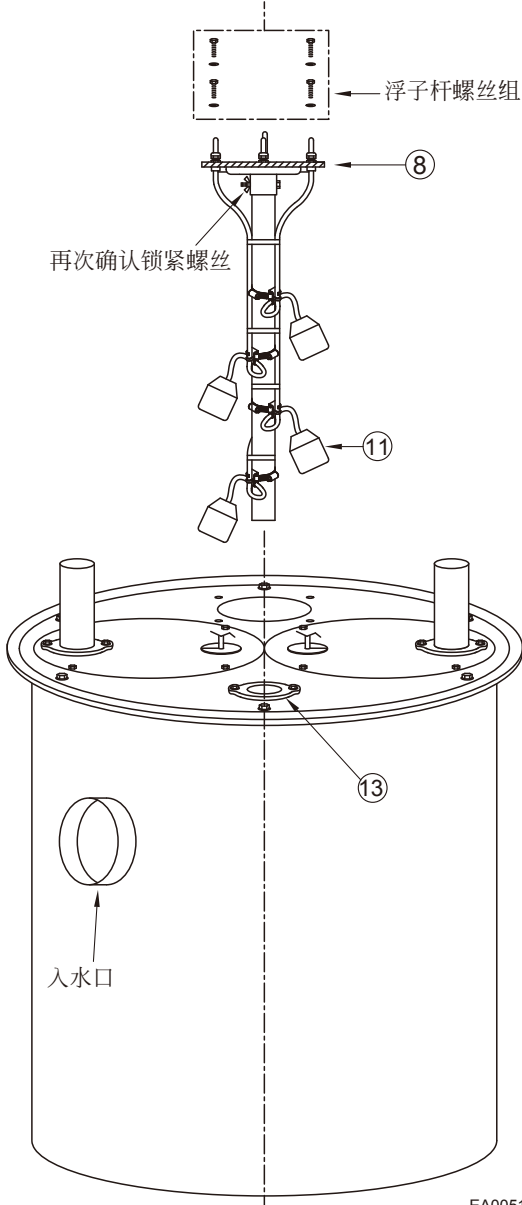

EA0051

## 步骤 4

所有水管接合处都需上管路密封胶。

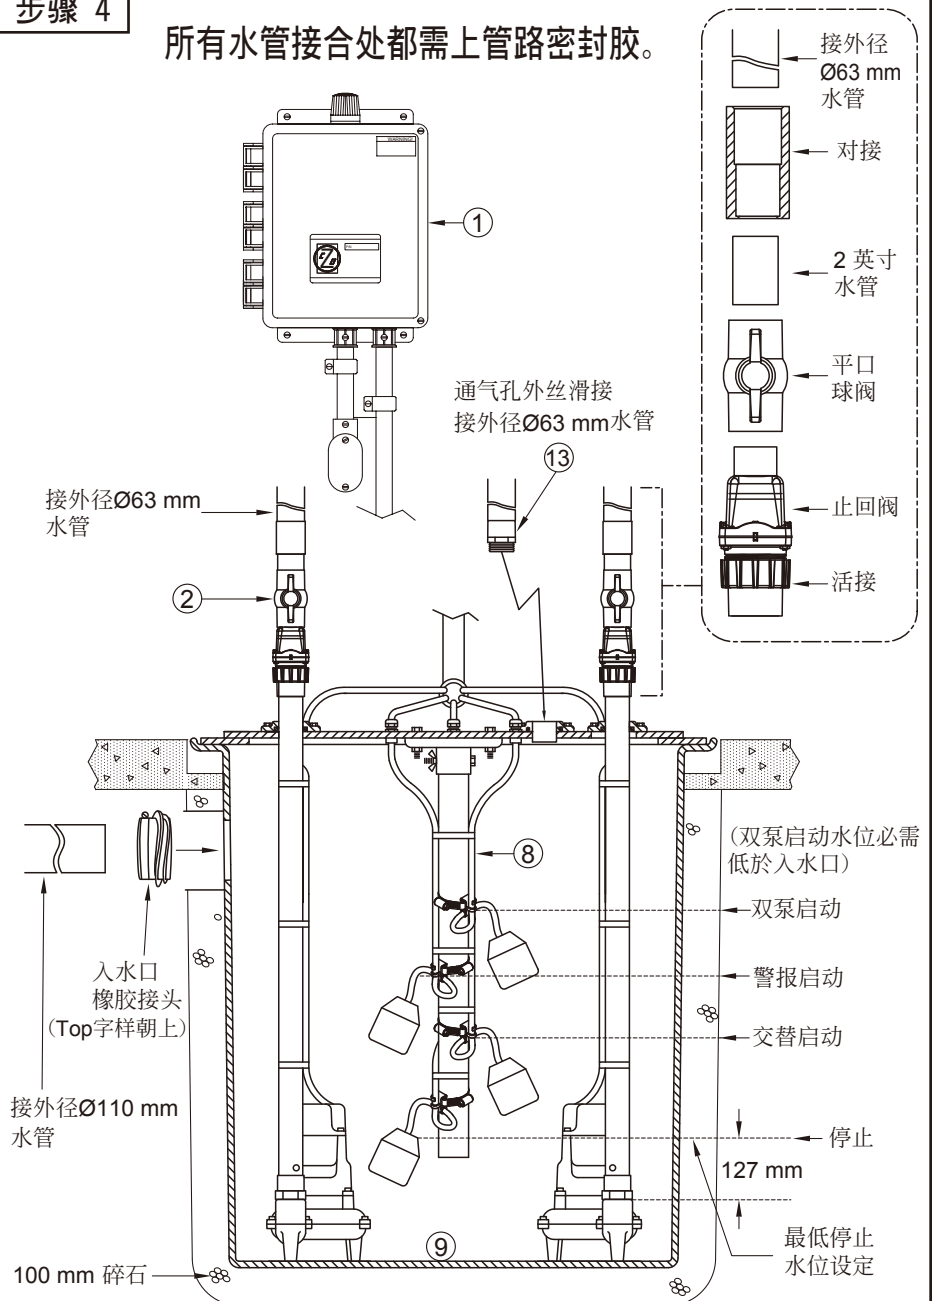

EA0051



## 安 装 说 明 书

# 如何安装橡胶密封环

备注：橡胶密封环设计使用在4” DWV ABS Sch40的管子及4” PVC Sch40(外径114 mm (4-1/2” ))的管子，使用温度范围为华式-20度到120度。

**(A) 步骤一：**用右手拿起橡胶密封环，使得箭头方向朝上，及可看见” TOP” 字样。

步骤二：将密封环的沟槽，卡入位於桶子侧边入水口的开孔下缘。

步骤三：在挤压密封环到孔里之前，先将密封环压成椭圆形，再将它整个装入。

步骤四：假如密封环呈现非圆形，使用手指在密封环内部绕，确认有适合的紧度，假如唇边外露，需挤回沟槽内。

**(B) 安装4” ABS或PVC管：**

步骤一：将管子切平。


步骤二：管子外缘需倒角来避免伤害到密封环凹槽的O Ring；O Ring 對於密封是非常重要的。

步骤三：使用肥皂水涂抹管子周围，约从管子倒角至安装於密封内管子的另一端长度范围102 mm (4” )，在管子倒角那端，施予足够的压力插入橡胶密封环，需注意管子插入密封环後，管子需外露超出密封环25 mm (1” )，使其延伸入桶子。

警告：需直接插入管子，不可旋转。

步骤四：在橡胶密封环的狭长浅沟槽，使用不锈钢管束夹紧。

# 产品尺寸

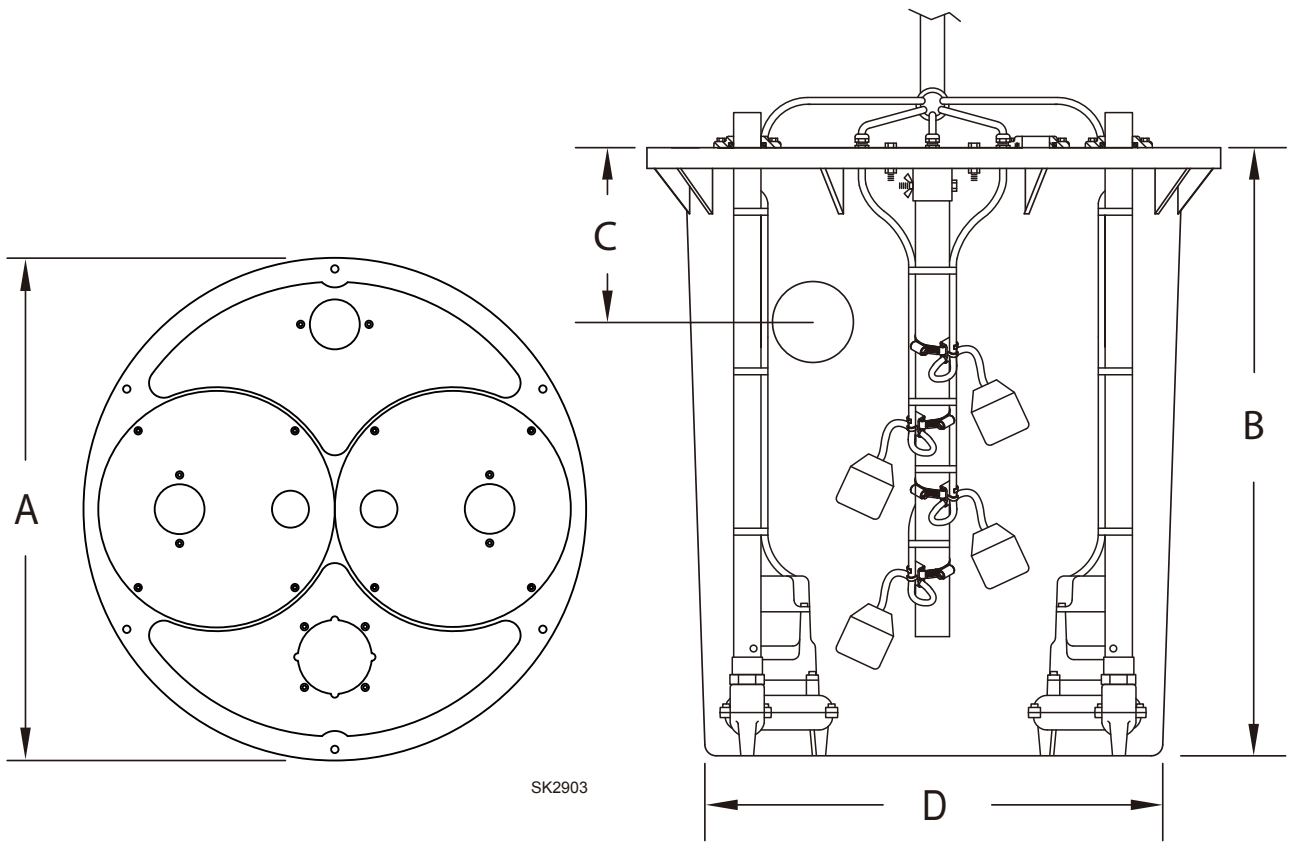

| 箱体尺寸      | 尺寸   |     |     |     |
|-----------|------|-----|-----|-----|
|           | A    | B   | C   | D   |
| 760 x 910 | 914  | 914 | 267 | 762 |
| 910 x 760 | 1016 | 762 | *   | 914 |
| 910 x 910 | 1067 | 914 | 267 | 914 |

单位：mm


\* 依客户需求开孔。



# 图片补充说明



(1) 上盖与箱体务必对应位置

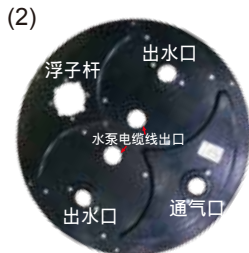

(2) 上盖位置图



(3) 螺丝仅锁在箱体有螺牙的螺丝孔



(4) 上盖对准有螺牙的螺丝孔



(5) 贴上边缘胶条




(6) 放置水泵，并用束带将电缆线固定在水管上，穿出上盖。



(7) 电缆线套进电缆线密封圈，安装在上盖。




(8) 松开上盖出水口螺丝

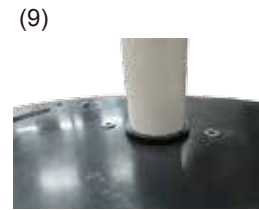


(9) 水管套上橡胶环



(10) 套上出水口组件

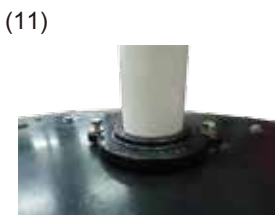

(11) 锁上螺丝组

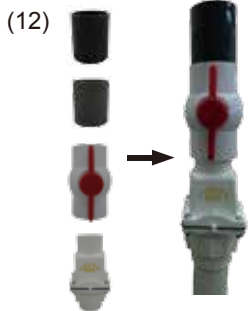


(12) 安装活接与止回阀组合组件



(13) 通气孔外丝滑接



(14) 确认浮子杆锁紧螺丝

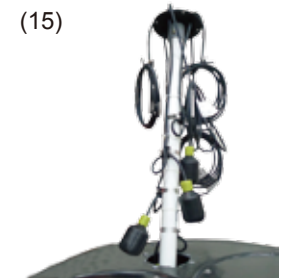


(15) 放入浮子杆，浮子背对水槽并确认浮子开关运作不被水槽干扰。



(16) 锁上螺丝组



(17) 上盖与箱体对准位置，锁上螺丝组。

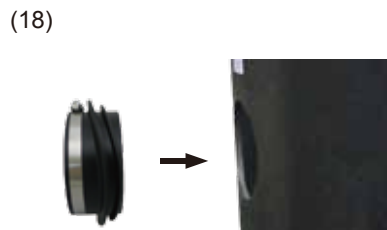

(18) 安装入水口橡胶接头 (Top字样朝上)

**所有水管接合处都需上管路密封胶。**

# 安装前务必详读说明书

Trusted. Tested. Tough.™



50 Hz

文件仅供参考  
若有任何修改  
恕不另行通知

## 安装说明书

适用机型

zoellerpumps.com

| 磨碎   | 污物                   | 污水/废水                          |
|------|----------------------|--------------------------------|
| 807  | 222, 422             | 49, 53, 55, 57, 59, 70, 72, 76 |
| 841  | 264, 266, 267, 268   | 86, 88, 98                     |
| 2702 | 270, 4270, 271, 4271 | 137, 139                       |
| 2722 | 282                  | 140, 4140, 145, 4145           |
|      | 292, 293, 294        | 152, 153, 161, 162, 163, 165   |
|      | 4290, 4291           | 185, 189                       |
|      | 490 系列               | 371, 372, 373                  |
|      | 2223/2233            |                                |








型号: \_\_\_\_\_  
 安装日: \_\_\_\_\_

国内法规允许，污物水泵可用在污水系统上，非自动型水泵应用在化粪池，建议搭配外接式水位控制。



### 安装前检查

1. 安装前请仔细检查所有零件。产品如果在运送中受损，请尽速联络经销商。
2. 安装前仔细阅读所有提供的文件，熟悉安装细节，并保存资料以供未来参考。
3. 请依照国内电工法规标准进行安装。

|  <b>警告</b>  | <b>安全守则</b>   |
|--|---|
| <ol style="list-style-type: none"> <li>1. 为防范使用者触电，本公司所有产品皆配有包含接地功能的电线及三插插头。为确保安全，请勿将插头的接地插销拔除。</li> <li>2. 为确保安全请勿使用延长线。加装延长线容易使水泵马达接收不到足够的电压。更重要的是，若延长线的绝缘遭破坏、或插头松脱掉入水中，将可能造成危险。</li> <li>3. 请确认在供给水泵电源的电路中加装适当规格的保险丝或断路器。在此建议依照水泵铭牌上的电流值，并参照国内电工法则来选择及安装独立的断路器。</li> <li>4. 请在安装前测试插座的漏电保护功能。为了安全考量，请使用符合国内电工法规的电路测试仪器来检查插座中的火线、中性线及地线是否配置正确。若发现异常，请联络合格的水电技师来为您解决问题。</li> <li>5. 为了保护您的安全，接触水泵前请先拔除电源。如果水泵使用电线直接连接，需在电控箱内断电。任何情况下都不允许移除接地插销。确保人未站在水中，且穿上绝缘鞋。泵配有接地插头的设计，以帮助防止触电。必须按国内法规，正确安装接地的插座或控制箱。</li> <li>6. 仅得由持有证照的合格水电技师来进行水泵安装、管路搭配及电路配线。</li> <li>7. 若无监督本产品不适合给儿童、心智不健全或经验不足者使用，前述条件者使用本产品时，监督者应负全部安全责任。</li> <li>8. 为避免触电，请勿移除电缆线。如果电缆线受损，请联络经销商或本公司核可的服务单位维修。</li> <li>9. 本水泵含冷却油，在运作状态下会受压变热——断电后等待2.5小时再进行维修。</li> <li>10. 水泵不可使用於饮用水，冷却油有可能会污染水质。</li> <li>11. 为防范触电，本产品勿用於游泳池。</li> </ol> | <p>为避免严重或致命的人身伤害及重大财产损失，请阅读并遵守水泵的所有安全操作说明。</p> <p>本说明书在协助安装和操作本机型时，必须符合水泵的安全操作守则。</p> <p> 这是一个安全警告符号。当你在水泵或说明书中看到此符号，请查询以下符号，并警惕人身伤害或发生财产损失的可能性。</p> <p> <b>警告</b> 警告，表示可能会导致严重的人身伤害、死亡或重大财产损失的危险。</p> <p> <b>注意</b> 注意，表示可能会造成人身伤害或财产损失的危险。</p> <p> 电击危险警告，表示可能会导致严重的人身伤害、死亡或重大财产损失的危险。</p> <p> 接地标志，表示藉由连接外部导体之接地线，在故障时可防止触电发生。</p> <p> 阅读操作手册。</p> <p>使用水泵前，请彻底阅读本说明书内的说明和警告。并维护所有安全标签。</p> <p style="text-align: right;">保固请参阅第21页。</p> |

## ▲ CAUTION

## 注 意

1. 本机水泵的固体通过能力如下，请勿用来处理任何大於水泵的固体通过能力。
  - 49型和70、80系列可通过固粒直径9 mm。
  - 50、90系列和140、371、372型可通过固粒直径12 mm。
  - 130系列可通过固粒直径15 mm。
  - 145、373型和150、160、180系列可通过固粒直径19 mm。
  - 4290、490系列可通过固粒直径38 mm。
  - 200系列、2234可通过固粒直径50 mm。
2. 检查并确认使用的电源符合水泵铭牌上的规格需求。
3. 安装含自动浮球开关或外接式自动浮球开关的自动型产品时，安装者有责任确保浮球摆放在正确位置，且不会卡在水泵机组或机坑壁边，以确保本产品能正常运作。建议使用硬水管做为配管。
4. 排气孔的目的：  
一般沉水型污水泵都是从底部抽水，以防止水泵阻塞和泄漏。空气会因此容易积在水泵或管路内，造成气锁。排气孔是为了将这些空气排出。因此，必须在逆止阀与机坑盖下的管路凿一排气孔(直径约5 mm)，用以排来自底部入水口的积存空气。积存的空气可能源自於水泵运作时的搅动，或於水槽乾涸时进入水泵。排气孔应定期检验，排除阻塞。本产品运转时看见水从排气孔流出，为正常现象。
5. 时常检查是否有杂物卡住浮子。维修请洽本公司认可的维修站。
6. 铸铁水泵最高环境温度不得超过摄氏54度(华氏130度)，塑胶马达外壳的水泵最高环境温度不得超过摄氏40度(华氏104度)。
7. 请勿在总动力扬程低於性能曲线中扬程下限之场合使用。运转时需保持直立。请勿倾斜水泵。
8. 基於健康理由，不要使用水泵系统来注入水槽或洗衣机的水等。

## 保固说明

本产品的保固为自购买日起算的一年、或从工厂制造日期起算的1.5年，以先到期者为准。若能证明产品的缺陷是由材料或制造过程造成，本公司将负责维修或更换。本公司保留决定是否维修或更换产品、零件或配件的权利。维修或更换期间买方所产生的费用或损失不在保固范围内。本公司无法控制的损坏不在保固范围内。

保固不适用于：

- (1) 未依照说明书安装、操作或维护所造成的故障或损坏。
- (2) 不当操作、意外或疏忽所造成故障或损坏。
- (3) 加装不属於本产品的零、配件。
- (4) 未依照当地法规进行安装所造成的危害。

(5) 将产品用在非原本设计的用途上所造成的损坏。(例：抽取沙、碎石、水泥、泥巴、沥青、碳氢化合物及其衍生物、汽油、化学溶剂或其他有腐蚀性的液体、毛巾、女性卫生用品等。)

保固零、配件的退回：在本保固之下任何修理或更换需送回本公司或其他本公司所指定的维修服务点，运费需自付。在任何情况下本公司不承担其他责任，包含资产或设备的损坏、利润损失、等.....

本公司的责任不超过产品的实售价格。

上述为本产品唯一的保固说明，任何人的修改或另做承诺皆为无效。

在因涉嫌产品故障而招致损害的情况下，财产拥有人必须保留该产品以供调查之用。

## 安装注意事项

1. 请务必阅读本装置之所有安装资料。
2. 请务必检查装置是否在运送中产生可见的损坏。若装置显示受损，请洽经销商。
3. 请务必清除水坑中之杂物。将水泵放置在坚固地面上。切勿将水泵放置在泥沙上。
4. 请务必确认水坑大小足以允许浮子自由活动。
5. 处理前切断水泵电源。连结到独立受保护的接地漏电流断路器。请勿切断、拼接或损坏电源线。请勿用电源线拉动或举起水泵。请勿使用延长线。
6. 请务必在出水管线安装止回阀和管接头。切勿使用小於出水口径尺寸的水管安装。
7. 切勿使用污水泵抽取沙砾、污物或危险液体。
8. 请务必在安装後立即测试水泵，以确认系统正常运作。
9. 请务必以适合的盖子覆盖水坑。
10. 请务必详阅所有适用当地及国家规则，确认安装符合各项规定。
11. 若有疑问，请务必洽制造商查明。
12. 请务必考虑使用双水泵系统(见第16页)，以防单一水泵失效或过载时造成财产损失。
13. 请务必考虑电池备用系统，以防停电或故障造成的财产损失。
14. 请务必每3个月检查一次系统是否正常运作。

# 检查清单


| 异常状况                          | 可能原因                                      | 补救措施   |
|-------------------------------|---|--|
| <b>A. 水泵未开始运作。</b>            | 低电压、保险丝烧断、电路中断。                           | 由合格电气技师检查保险丝和电路。                                   |
|                               | 叶轮卡住。                                     | 联络经销商。   |
|                               | 马达或电线短路。                                  |  |
|                               | 浮子开关上有杂物。                                 | 去除杂物   |
| <b>B. 马达过热造成跳电或保险丝烧断。</b>     | 电压错误、负扬程(出水口高度低於水泵)、叶轮或轴封卡死、电容器、继电器或马达短路。 | 联络经销商。   |
| <b>C. 水泵启动停止次数太频繁。</b>        | 止回阀阻塞、无止回阀、热过载保护器启动或浮子有瑕疵。                | 联络经销商。   |
| <b>D. 水泵不停止。</b>              | 浮子下方有杂物。                                  | 去除浮子周围的杂物。   |
|                               | 浮子开关故障。                                   | 联络经销商。   |
| <b>E. 水泵运转正常，但抽不到水或水流量太少。</b> | 进水口周围有杂物。                                 | 清理进水口附近区域。   |
|                               | 排放管堵塞。                                    | 必要时卸除排放管，冲走杂物。                                     |
|                               | 电压太低或不当电压。                                | 由合格电气技师检查家庭管线。                                     |
|                               | 叶轮受损。                                     | 联络经销商。   |
|                               | 马达运转不当、电容器瑕疵、入水含空气或造成空气进入水机室。             | 联络经销商。   |
|                               | 水泵气锁。                                     | 确保排放管中的通气孔畅通。                                      |
|                               | 安装扬程超过系统设计的扬程。                            | 更换排放管或联络经销商。                                       |
| <b>F. 扬程或流量使用一般时间後降低。</b>     | 管路或止回阀阻塞。磨蚀性物质及有害的化学物质造成叶轮及水机损坏。          | 检查管路、打开并检查水机。                                      |
| <b>G. 如果桶子或接头漏水。</b>          | 管配件或螺丝锁过紧或太松，或垫圈没有平均的锁紧。                  | 小心锁紧管接头(使用管路密封胶)和螺丝。检查垫圈的位置，均匀地锁紧盖子。不要将管接头或螺丝锁的过紧。 |

如果检查後仍无法排除问题，请与Zoeller公司授权的经销商联络，切勿自行拆卸水泵。




# 各种应用建议安装方式


- (1) 电源线长度少于10米仅用于室内。电气配线及保护措施需符合相关电气规范与当地其他应用惯例之需求。
  - (2) 请在水槽稍高处安装适当的由令与止回阀组合组件，以便拆卸水泵供清洁整理或维修。若需高扬程或安装于盖板下，需使用30-0164 外径 $\varnothing 50$  mm(1-1/2")管, 30-0152 外径 $\varnothing 63$  mm(2")管和30-0160 外径 $\varnothing 90$  mm(3")管。
  - (3) 所有安装需使用水槽盖板防止杂物掉入水槽，并防止人员意外受伤。
  - (4) 在装设由令止回阀的场合，请在水泵顶部等高处钻一直径5 mm小孔。为避免通气孔水流影响对浮子的正常运作，通气孔的位置请避免面向浮子。建议钻孔位置低于“停止”水位，可降低水流撞击桶子产生的噪音。注：该孔需低于水槽盖板，并需定期清理（高扬程机组请参考封面页第4项「注意事项」）水泵运转时可看见该小孔有水流出。
  - (5) 用胶带或线夹将电源线在出水管上固定牢靠，并使其避开浮子开关机构。
  - (6) 出水管管径不可小于水泵出口口径。
  - (7) 水槽需符合适用规范及规格。
  - (8) 启动水泵前确认水泵水平，且浮子开关机构与水槽边墙保持净空距离。
  - (9) 完成安装后必须清理水槽内所有杂物碎屑。
  - (10) 闸阀或球阀由安装者提供，并需依照所有相关规范安装。
  - (11) 如图示安装浮球开关。「停止」点的最佳位置为马达外壳上方、与入口成180°的方位。切勿将「停止」点配置在水泵出口以下（仅适用于污水与污物）。注：水泵自动控制请参考「排水安装图」。
  - (12) 应使用气密密封圈隔绝气体与气味。
  - (13) 利用通气管将气体与气味排至大气（仅适用于污水与排水）。
  - (14) 请在水泵下方安装卓勒水泵座(型号10-2421)以形成沉淀池（仅适用于污物与排水）。
  - (15) 可选择防水控制箱，请参考FM1597文件。
  - (16) 适当的浮子开关距离需参考当地或国际标准和说明书。
  - (17) 请使用化粪池直管以便利近接水泵与过滤器。
- 注：双重密封水泵可提供额外保障，预防密封故障造成的损坏。

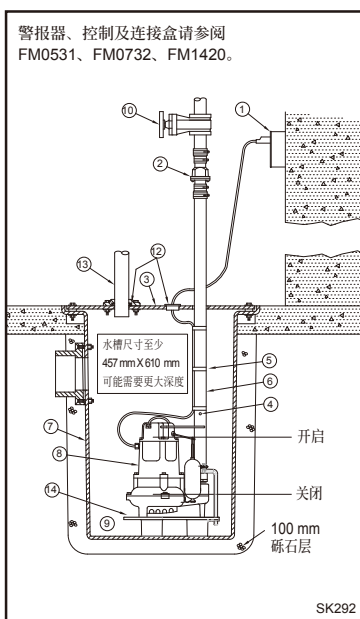

标准排水安装

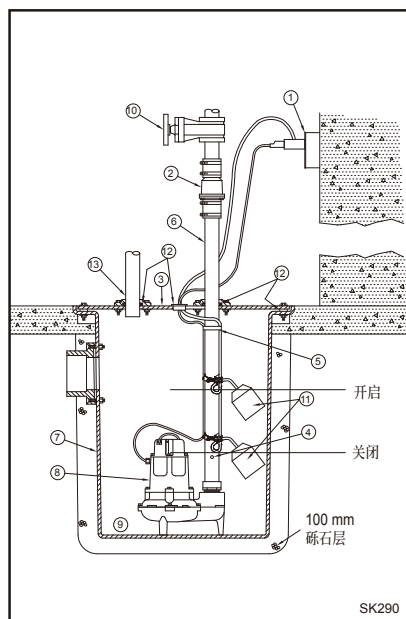

标准污水安装

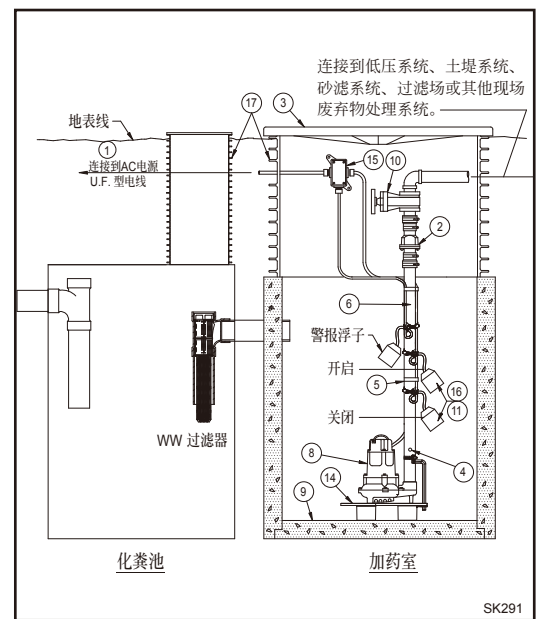

标准污物安装

所有安装作业必须符合适用的水电规范，至少包括现行电工规则、当地、区域及 / 或现行配管规则等。不适用于危险性场所。

# 水泵配线注意事项



**警告** 为您的安全着想，处理水泵前务必先卸除电源。单相水泵均附带 3 芯接地插头以防止触电的可能性。任何情况下都不允许移除接地插销。3 插插头必须插入 3 插用插座。如果无法提供 3 插用插座，也必须更改为有接地功能按照国家电气法规和所有适用当地的法规和条例的安装方式。

所有三相水泵需配备有电机启动的设备与电机超载保护。安装水泵必须按照国家电气法规和所有适用当地的法规和条例。水泵不得安装在美国国家电气规范ANSI/NFPA 70列为危险环境的位置。




**警告** 「触电危险」切勿拆卸电源线或拉扯直接连接在水泵上的释压管或接线路。  
**警告** 电器电路及五金配件的安装与检查必须由合格专业电工执行。




# 浮子的建议安装方式

某些安装场合可能需要利用独立的浮子杆安装各控制开关，以免牵挂到水泵、管路、阀门等。卓勒提供各种浮子杆，请参考FM0526型录；也可利用标准管材与配件制作。

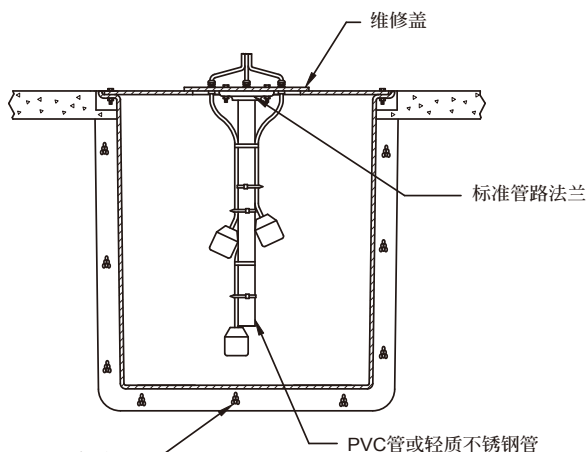

钢盖板水池上标准浮子安装杆

SK1217

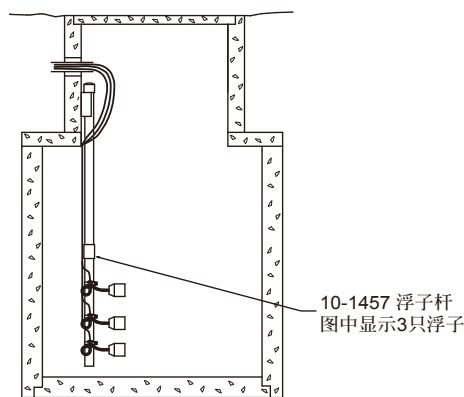

混凝土水池或化粪池上升井标准浮子安装杆

SK1218

混凝土水池或化粪池上升井标准浮子安装杆

# 单相配线注意事项

要使非自动水泵运转，需配置控制箱或20 安培的浮子开关(P/N 10-0748)在电路上。按照面板提供的电路系统说明安装。


# 三相配线注意事项

三相非自动水泵自动运转必须搭配控制柜。按照面板提供的电路系统说明安装。

三相自动型水泵线路图请参阅位於最右侧。


安装水泵之前，请检查以确保线路已正确连接到电源，绿色接地线（请参见配线图）已连接到有效的接地面。临时充电，观察启动扭矩造成的旋转，旋转方向如果是与水机上的箭头相反即为正确。如果旋转不是正确的，交换地线以外的两条接线安装，即可成为正确的安装。

非自动型  
三相

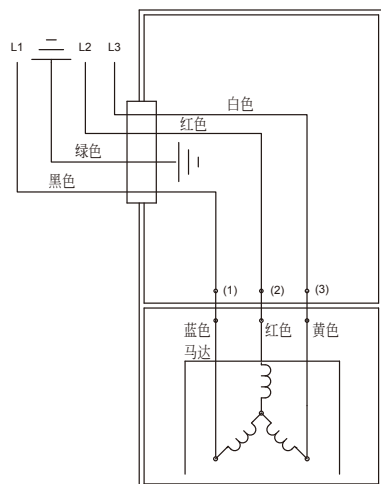

006848

自动型  
三相

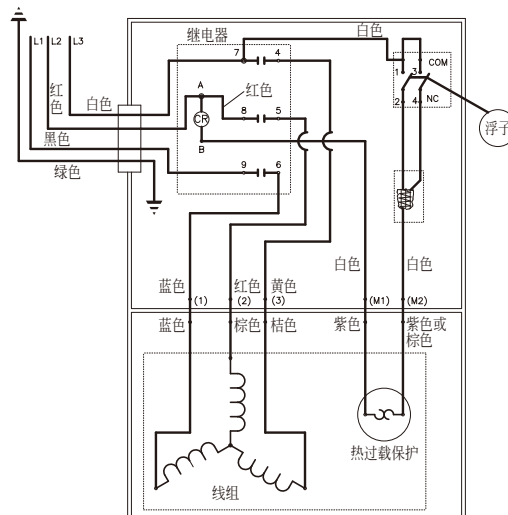

013071

# 额外保护系统

## 双泵系统


「额外保护」双泵系统为昂贵双工切换水泵系统的经济型替代方案，且安装极为简便。

「额外保护」双泵系统包括：

- a. 两台任选的含浮子开关非自动水泵
- b. 一套警报系统
- c. 两只适用的由令止回阀


## 优点

- (1) 双泵系统提供优越的泵浦性能但价格低廉。该系统安装简单又经济。
- (2) 比单一水泵系统更为可靠，大幅降低因磨损或损坏所导致的危险及费时费钱的系统故障问题。
- (3) 以巧夺天工的保护工艺，为高级豪华的居住环境提供最高满意度的安心使用。
- (4) 改变水泵插头连接即可变换前导与滞後位置。

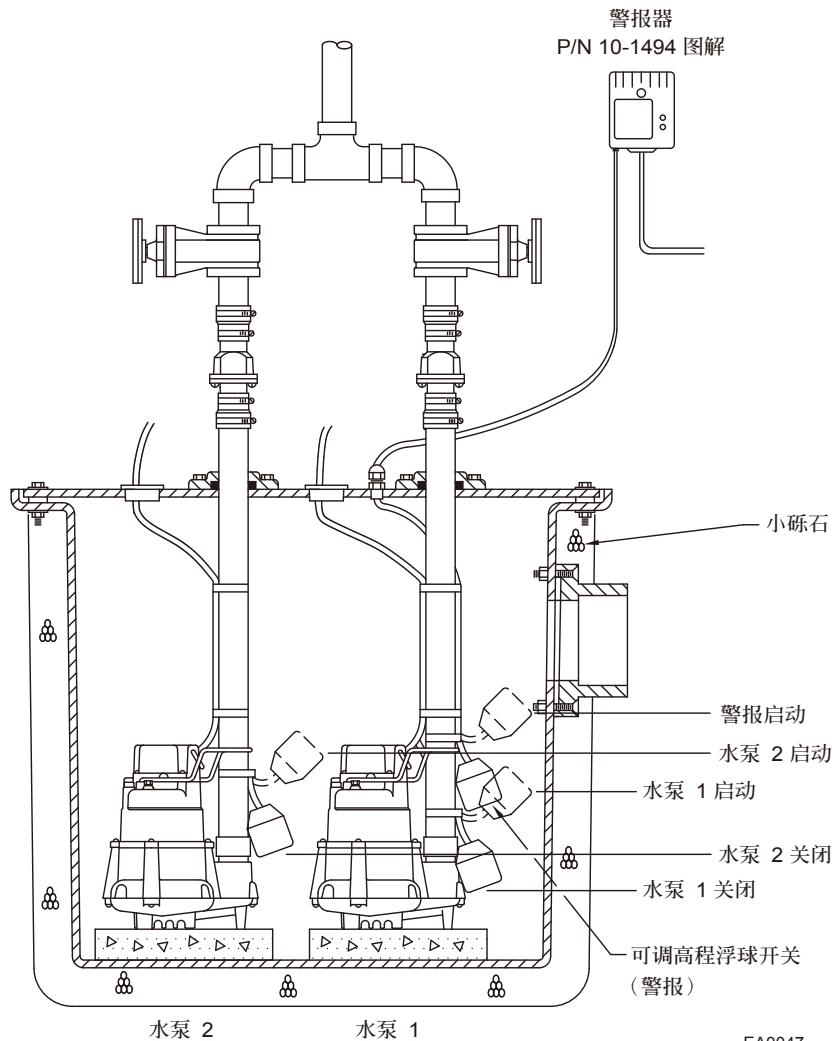

\*水泵之间最小距离50 mm

# V, WU 型安装

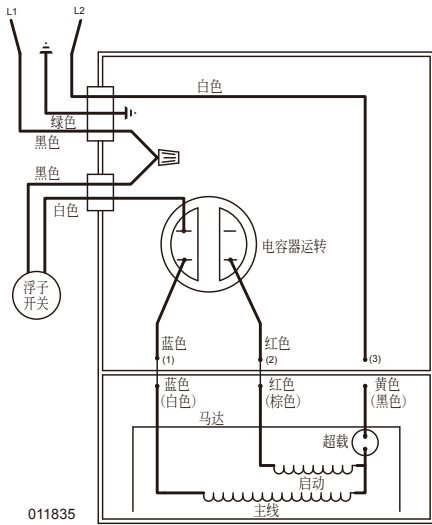


线路图

V, WU - 220V, 1 Ph, 50 Hz.

确定抽水范围  
以公厘为单位 (1 英寸=25 公厘)

|        | 最短  | 最长   |     |     |     |
|--------|-----|------|-----|-----|-----|
| 缆线系统长度 | 127 | 254  | 381 | 508 | 559 |
| (英寸)   | 5   | 10   | 15  | 20  | 22  |
| 抽水范围   | 229 | 343  | 457 | 559 | 610 |
| (英寸)   | 9   | 13.5 | 18  | 22  | 24  |

使用仅作为指南。由於电缆的重量，水平以上抽水范围不等於水平以下的抽水范围。抽水范围是基於水无波动的的条件测试得之。水的温度和浮子线的形状都可能造成抽水范围有所不同。线的长度增加，抽水的范围就会增加。

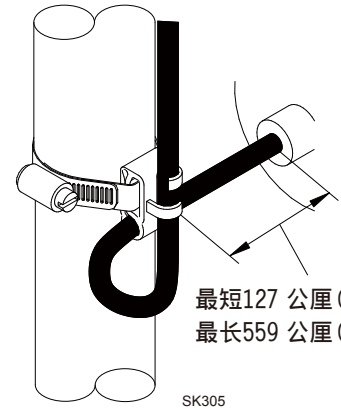

最短127 公厘 (5 英寸)  
最长559 公厘 (22 英寸)

20 安培开关 (WU 型)

备注: 未能保持适当的系线的限度内, 可能会影响正常的开关操作。

备注: 电缆线必须水平位置方式安装。

# 2223/2233线路图

